

J. DOSHER LIST OF OTHER MANUALS 17th May 2009 - to order email: jdosh@blueyonder.co.uk				
MAKE	MODEL	DESCRIPTION	PAGES	FILE
A/S S.P. RADIO	SAILOR T128	SSB TRANSMITTER INSTRUCTION BOOK	94	Y
A/S S.P. RADIO	RT2047/D	VHF MARINE TRANSCEIVER INSTRUCTION MANUAL	131	Y
ADMIRALTY	B40	RECEIVER SERVICE MANUAL	355	Y
ADMIRALTY	B29	RECEIVER INSTRUCTION MANUAL	35	Y
ADRET	2230A	LEVEL GENERATOR OPERATING & SERVICE MANUAL	168	Y
ADRET	2230A	LEVEL GENERATOR OPERATING (FRENCH)	68	Y
ADRET	6300C	GENERATOR SYNTHESIZER INSTRUCTION MANUAL	163	Y
ADRET	7100A	SIGNAL GENERATOR INSTRUCTION MANUAL	113	Y
ADRET	7100D	SIGNAL GENERATOR USER MANUAL (FRENCH)	112	Y
ADRET	7200A	SIGNAL GENERATOR MAINTENANCE MANUAL	125	Y
ADRET	730A	SIGNAL GENERATOR USER MANUAL (FRENCH)	42	Y
ADRET	730A	SIGNAL GENERATOR MAINTENANCE HANDBOOK PART 1	55	Y
ADRET	730A	SIGNAL GENERATOR MAINTENANCE HANDBOOK PART 2	111	Y
ADRET	740A	SIGNAL GENERATOR OPERATING INSTRUCTIONS	58	Y
ADRET	742B	SIGNAL GENERATOR OPERATING MANUAL	72	Y
ADVANCE	E2	SIGNAL GENERATOR INSTRUCTIONS	8	Y
ADVANCE	J1	SIGNAL GENERATOR INSTRUCTIONS	5	Y
ADVANCE	OFS1B	OFF AIR FREQUENCY STANDARD INSTRUCTION MANUAL	20	Y
ADVANCE	PMD18-1	MODULAR STAB. POWER SUPPLY OPERATING	21	Y
ADVANCE	SG62B	SIGNAL GENERATOR INSTRUCTIONS	15	Y
ADVANCE	SG66	SIGNAL GENERATOR INSTRUCTIONS	12	Y
ADVANCE	SG67A	WIDE RANGE OSCILLATOR INSTRUCTION MANUAL	24	Y
ADVANTEST	R3131	SPECTRUM ANALYZER OPERATION MANUAL	255	Y
ADVANTEST	R3261/3361	SPECTRUM ANALYSER INSTRUCTION MANUAL	371	Y
ADVANTEST	R3261/3361	SPECTRUM ANALYSER MAINTENANCE MANUAL	550	Y
ADVANTEST	R3265/3271	SPECTRUM ANALYSER INSTRUCTION MANUAL	320	Y
ADVANTEST	R3265/3271	SPECTRUM ANALYSER OPT 15 PROG GUIDE	365	Y
ADVANTEST	R3265A/3271A	SPECTRUM ANALYZER INSTRUCTION MANUAL	613	Y
ADVANTEST	R3265A/3271A	SPECTRUM ANALYZER MAINTENANCE VOLUME 1	466	Y
ADVANTEST	R3265A/3271A	SPECTRUM ANALYZER MAINTENANCE VOLUME 2	339	Y
ADVANTEST	R3265A/3271A	SPECTRUM ANALYZER MAINTENANCE VOLUME 3	250	Y
ADVANTEST	R3267/73	SPECTRUM ANALYZER OPERATION MANUAL	375	Y
ADVANTEST	R3465 SERIES	MODULATION SPECTRUM ANALYZER OPERATION MANUAL	478	y
ADVANTEST	R3465/3272/3263	SPECTRUM ANALYZER PROGRAMMING MANUAL	181	Y
ADVANTEST	R3752/23/64/65/66/67	NETWORK ANALYZER PROGRAMMING GUIDE	223	Y
ADVANTEST	R3764/65/66/67	NETWORK ANALYZER PROGRAMMING MANUAL	511	Y
ADVANTEST	R3765AH/67AH	NETWORK ANALYZER OPERATING MANUAL	306	Y
ADVANTEST	R3765A/67A	NETWORK ANALYZER OPERATING MANUAL	356	Y
ADVANTEST	R4131	SPECTRUM ANALYSER INSTRUCTION MANUAL	368	Y
ADVANTEST	R4944A	EPROM PROGRAMMER INSTRUCTION MANUAL	286	Y
ADVANTEST	TR14101	900MHZ REJECT FILTER INSTRUCTION MANUAL	7	Y
ADVANTEST	TR5821/22/23/23H	UNIVERSAL COUNTER OPERATING MANUAL	100	Y
AEA	ISOLOOP 10-30	HF LOOP ANTENNA OPERATING MANUAL	18	Y
AEA	PK12	TNC OPERATING MANUAL	135	Y
AEA	PK-96	TNC OPERATING MANUAL	172	Y
AEL	2230	HF SSB TRANSCEIVER TECHNICAL MANUAL		
AEL	3030	HF SSB TRANSCEIVER TECHNICAL MANUAL	41	Y
AEL	3030	HF SSB TRANSCEIVER TECHNICAL MANUAL (FRENCH)	43	Y
AFL	BDP-143/152	BAND PASS DUPLEXER HANDBOOK	9	Y
AFL	D6	RX SPLITTER AMP SERVICE MANUAL	27	Y
AILTECH	74A	AUTOMATIC NOISE FIGURE INDICATOR INSTRUCTION		
AILTECH	75	PANFI INSTRUCTION MANUAL		
AILTECH	125A	POWER SIGNAL SOURCE OPERATION & MAINTENANCE		
AILTECH	136	PRECISION TEST RECEIVER INSTRUCTION MANUAL	112	Y
AILTECH	445 / 446	POWER SIGNAL SOURCES OPERATION & MAINTENANCE		
AILTECH	460	SIGNAL GENERATOR OPERATION & MAINTENANCE	283	Y
AILTECH	707	SPECTRUM ANALYSER CALIBRATION	45	Y
AILTECH	707	SPECTRUM ANALYSER OPERATING	37	Y
AILTECH	707	SPECTRUM ANALYSER SERVICE	230	Y
AILTECH	757	SPECTRUM ANALYSER OPERATION & MAINTENANCE	432	Y
AILTECH	7514	AUTOMATIC NOISE FIGURE INDICATOR OPER & MAINT	174	Y
AILTECH	7600	NOISE GENERATOR OPERATING MANUAL		
AKD	4001	4M MOBILE TX/RX OWNER'S MANUAL	6	Y
AKD	6001	6M MOBILE TX/RX OWNER'S MANUAL	7	Y
ALINCO	DJ580T/E	VHF/UHF TX/RX INSTRUCTION MANUAL	22	Y
ALINCO	DM-330	SERVICE MANUAL	29	Y
ALINCO	DR-570T/E	SERVICE MANUAL	50	Y
ALINCO	DR-590	SERVICE MANUAL	36	Y
ALINCO	DR-605	SERVICE MANUAL	54	Y
ALINCO	DR-M06TH	SERVICE MANUAL	42	Y
ALINCO	DX-70TH	SERVICE MANUAL	58	Y
ALINCO	EDX-2	SERVICE MANUAL	10	Y
ALPHA	76	HF LINEAR OPERATING & TECHNICAL MANUAL	18	Y
AMERITRON	AL84	HF LINEAR INSTRUCTION MANUAL	4	Y
AMERITRON	RCS-4	REMOTE COAX SWITCH	4	Y
AMPLIFIER-RESEARCH	1000LP	2-200MHZ AMPLIFIER SPECIFICATIONS	4	Y
AMPLIFIER-RESEARCH	150A220	AMPLIFIER OPERATING MANUAL	13	Y
AMPLIFIER-RESEARCH	5S1G4	0.8-4.2GHZ 5 WATTS AMPLIFIER SPECIFICATIONS	2	Y
AMPLIFIER-RESEARCH	5W1000	AMPLIFIER OPERATING & SERVICE MANUAL		

AMPLIFIER-RESEARCH	700A	700W POWER AMPLIFIER OPERATING & SERVICE	71	Y
ANDO	AQ6317B	OPTICAL SPECTRUM ANALYZER INSTRUCTION MANUAL	465	Y
ANRITSU	MD6401A	DATA TRANSMISSION ANALYZER OPERATION MANUAL	148	Y
ANRITSU	MD6401A-MD0620A/B	GPIB/RS232 INTERFACE UNIT OPERATION MANUAL	62	Y
ANRITSU	MH628A	TRACKING GENERATOR INSTRUCTION MANUAL	71	Y
ANRITSU	MH680B	TRACKING GENERATOR INSTRUCTION MANUAL	74	Y
ANRITSU	ML83A	POWER METER SERVICE MANUAL		
ANRITSU	ML93A	OPTICAL POWER METER INSTRUCTION MANUAL	135	Y
ANRITSU	MS2601A	SPECTRUM ANALYSER OPERATION MANUAL	559	Y
ANRITSU	MS2601A/J	SPECTRUM ANALYSER SERVICE MANUAL	419	Y
ANRITSU	MS2602A	SPECTRUM ANALYZER OPER INSTR BASIC	132	Y
ANRITSU	MS2602A	SPECTRUM ANALYZER OPER INSTR DETAILED	400	Y
ANRITSU	MS2602A	SPECTRUM ANALYZER OPER GPIB REMOTE CONTROL	276	Y
ANRITSU	MS420	GPIB MANUAL	80	Y
ANRITSU	MS420	NETWORK ANALYSER OPERATION	265	Y
ANRITSU	MS420	NETWORK ANALYSER SERVICE	670	Y
ANRITSU	MS420	PERSONAL TEST AUTOMATION (PTA)	122	Y
ANRITSU	MS420	TECHNICAL NOTE 101	50	Y
ANRITSU	MS610B/J	SPECTRUM ANALYSER OPERATION MANUAL	121	Y
ANRITSU	MS610B/J/J1	SPECTRUM ANALYSER OPERATION MANUAL	174	Y
ANRITSU	MS610B/J	SPECTRUM ANALYSER SERVICE MANUAL		
ANRITSU	MS610B/J/J1	SPECTRUM ANALYSER SERVICE MANUAL	166	Y
ANRITSU	MS2711A	HANDHELD SPECTRUM ANALYZER USER GUIDE	72	Y
ANRITSU	MS2711A	HANDHELD SPECTRUM ANALYZER PROGRAMMING GUIDE	49	Y
ANRITSU	MS2711B	HANDHELD SPECTRUM ANALYZER USER GUIDE	124	Y
ANRITSU	MS2711D	HANDHELD SPECTRUM ANALYZER PROGRAMMING	93	Y
ANRITSU	MS2711D	HANDHELD SPECTRUM ANALYZER USER GUIDE	148	Y
ANRITSU	MS8608A/09A	RADIO TEST SET OPERATION MANUAL VOLUME 1	289	Y
ANRITSU	MS8608A/09A	RADIO TEST SET OPERATION MANUAL VOLUME 2	205	Y
ANRITSU	MS8608A/09A	RADIO TEST SET OPERATION MANUAL VOLUME 3	331	Y
ANRITSU	S113B/14B/S331B/32B	SITEMASTER PROGRAMMING MANUAL	49	Y
ANRITSU	S113B/14B/S331B/32B	SITEMASTER USERS GUIDE	73	Y
ANRITSU	S330A/S331A	SITEMASTER USERS GUIDE	85	Y
AOR	AR-1000	PROGRAM MANUAL	8	Y
AOR	AR-1500	OPERATING MANUAL	16	Y
ARMY	A41 SET	VHF BACKPACK INSTRUCTION MANUAL	193	Y
ASCOM	SE610	VHF/UHF MOBILE TRANSCEIVER SERVICE MANUAL	93	Y
ASCOM	SE651	VHF/UHF MOBILE TRANSCEIVER SERVICE MANUAL		
AVAL	PKW1000	EPROM PROGRAMMER USER MANUAL	146	Y
AVO	A101	AVOSCOPE OPERATING INSTRUCTIONS	25	Y
AVO	B150	UNIVERSAL BRIDGE OPERATING INSTRUCTIONS	9	Y
AVO	B150/3	UNIVERSAL BRIDGE OPERATING & CIRCUITS	19	Y
AVO	B184	AUTOMATIC LCR ANALYSER OPERATING INSTRUCTIONS	7	Y
AVO	CT160	WORKING INSTRUCTIONS	39	Y
AVO	DA112	DIGITAL AVOMETER OPERATING INSTRUCTIONS	31	Y
AVO	DA116	DIGITAL AVOMETER SERVICING INFORMATION	35	Y
AVO	EA113	ELECTRONIC AVOMETER OPERATING INSTRUCTIONS	8	Y
AVO	ELECTRONIC TESTMETER	MK IV WORKING INSTRUCTIONS	30	Y
AVO	MODEL 7	WORKING INSTRUCTIONS	16	Y
AVO	MODEL 7 MK II	WORKING INSTRUCTIONS	17	Y
AVO	MODEL 8 MK II	WORKING INSTRUCTIONS	17	Y
AVO	MODEL 8 MK III	WORKING INSTRUCTIONS	25	Y
AVO	MODEL 8 MK 4	OPERATING INSTRUCTIONS	17	Y
AVO	MODEL 8 MK 5	OPERATING INSTRUCTIONS	24	Y
AVO	MODEL 8 MK 6	OPERATING INSTRUCTIONS		
AVO	MULTIMINOR	OPERATING INSTRUCTIONS	4	Y
AVO	RM170	SUPER MEGOHMMETER		
AVO	RM215-L/1	AC/DC BREAKDOWN TESTER OPERATING INSTRUCTIONS	11	Y
AVO	TRANS.ANAL	TRANSISTOR ANALYSER OPERATING MANUAL		
AVO	VALVE TESTER	INSTRUCTIONS & VALVE DATA CHARTS		
AVO	VALVE CHAR METER	MK II WORKING INSTRUCTIONS	30	Y
BALL EFRATOM	FRK (H OR L)	RUBIDIUM FREQUENCY STANDARD MAINTENANCE MANUAL	79	Y
BALL EFRATOM	FRS	RUBIDIUM FREQUENCY STANDARD OPERATION MANUAL	62	Y
BALL EFRATOM	M-100	RUBIDIUM FREQUENCY STANDARD TECHNICAL MANUAL	136	Y
BANG & OLUFSEN	BEOMASTER 5500	SERVICE MANUAL		
BANG & OLUFSEN	BEOMASTER 6500	SERVICE MANUAL		
BANG & OLUFSEN	BEOMASTER 9000	SERVICE MANUAL		
BARLOW WADLEY	XCR30	SERVICE MANUAL	15	Y
BARRETT	550	HF TRANSCEIVER TECHNICAL MANUAL	116	Y
BAYCOM	1.60	SOFTWARE MANUAL	42	Y
BAYCOM	TNC2X	9600/1200 TNC	24	Y
BELCOM	LINER 15	21 MHZ SSB MOBILE OWNERS GUIDE	12	Y
BELCOM	LINER 2	144MHz SSB MOBILE OWNERS GUIDE	15	Y
BENDIX	SKIPPER 430	MARINE RADIOTELEPHONE	11	Y
BIRD	43 SERIES	THRULINE POWER METER	61	Y
BIRD	43,4430/31,4521-27	THRULINE POWER METER INSTRUCTION BOOK	37	Y
BIRD	6100 SERIES	TERMALINE RF WATTMETER INSTRUCTION BOOK	14	Y
BIRD	6254	RF MILLIWATTMETER OPERATING & MAINTENANCE	13	Y
BIRD	8000 SERIES	COAXIAL LOAD RESISTOR INSTRUCTION MANUAL	20	Y
BIRD	8251/52	COAXIAL LOAD RESISTOR INSTRUCTION MANUAL	18	Y
BOONTON	202B	AM/FM SIGNAL GENERATOR OPERATING INSTRUCTIONS	16	Y

BOONTON	211-A	SIGNAL GENERATOR OPERATING & SERVICE MANUAL		
BOONTON	250A	RX METER INSTRUCTION MANUAL	33	Y
BOONTON	260A	Q METER INSTRUCTION MANUAL	32	Y
BOONTON	4230A	RF POWER METER INSTRUCTION MANUAL	67	Y
BOONTON	59	MEGACYCLE METER	26	Y
BOONTON	82AD-01	IEE-488 BUS INTERFACE OPTION	38	Y
BOONTON	92BD	RF MILLIVOLTMETER INSTRUCTION MANUAL	63	Y
BOONTON	92EA	RF MILLIVOLTMETER INSTRUCTION MANUAL	43	Y
BOSCH	KF83/163/453	MOBILE TX/RX SERVICE MANUAL	358	Y
BP MICROSYSTEMS	PLD-1100	PROGRAMMER USER MANUAL	48	Y
BRAUN	LT470	2M / 70CM TRANSVERTER	15	Y
CALIBRE	I2C	COMMS ADAPTER USER MANUAL	32	Y
CASELLA	3143/81	THERMOHYGROGRAPH INSTRUCTION LEAFLET		
CDR	TR-44	HAM ROTOR INSTRUCTIONS		
CIRCUIT SERVICES	RCC 8000	RADIOCODE CLOCK USERS MANUAL (EDDY 1645)		
CLARK	PU12	PULL-UP MAST MILITARY USER'S HANDBOOK	17	Y
CLARK	SCAM 7,9,12,15	PUMP-UP MAST USERS HANDBOOK & PARTS LIST	71	Y
CLEARTONE	351	VHF FM MOBILE OPER & SERVICE	29	Y
CLEARTONE	CH300	VHF FM PORTABLE SERVICE MANUAL	19	Y
CLEARTONE	CH650	UHF FM PORTABLE SERVICE MANUAL	76	Y
CLEARTONE	CH800	VHF FM HANDHELD OPERATING & SERVICE MANUAL	26	Y
CLEARTONE	CM2000	VHF FM MOBILE INSTRUCTION MANUAL	6	Y
CLEARTONE	CM2000	VHF FM MOBILE SERVICE MANUAL	24	Y
CLEARTONE	CM6000	INSTRUCTION MANUAL	8	Y
CLEARTONE	CM6000	SERVICE MANUAL	75	Y
CLEARTONE	CM7000	PROGRAMMING & SERVICE MANUAL	111	Y
CODAN	6801	SERVICE MANUAL	131	Y
CODAN	9360	HF SSB TRANSCEIVER REFERENCE MANUAL		
CODAN	9360	HF SSB TRANSCEIVER USER GUIDE		
CODAR	AT5	HF TX INSTRUCTION MANUAL	7	Y
COLINE	DC-1500	SWR / POWER METER INSTRUCTION MANUAL	12	Y
COM-SPEC	CS-10	POWER AMPLIFIER OWNERS MANUAL	11	Y
COM-SPEC	PE-1000	PAGING ENCODER MANUAL	30	Y
COM-SPEC	TP-38	SHARED REPEATER TONE PANEL MANUAL	33	Y
COMARK	1600	ELECTRONIC THERMOMETER SERVICE MANUAL		
COMARK	1905	INSULATION METER SERVICE MANUAL	7	Y
COMMUNIQUE	C866	HIGH BAND MOBILE SERVICE MANUAL		
CONTINENTAL	10201	UPCONVERTER/DOWNCONVERTER		
COUTANT	ASC-ATC	POWER SUPPLY HANDBOOK		
CUBIC COMMUNICATIONS	CU-6101	AUTO ATU TECHNICAL MANUAL	50	Y
CUBIC COMMUNICATIONS	CU-6115	AUTO ATU TECHNICAL MANUAL		
CUBIC COMMUNICATIONS	PP-8111	POWER SUPPLY OPERATING & SERVICE MANUAL	20	Y
CUBIC COMMUNICATIONS	R-3030/R3080	RECEIVER TECHNICAL MANUAL	202	Y
CUBIC COMMUNICATIONS	RC-8451	AUDIO REMOTE CONTROL OPERATING & SERVICE MANUAL		
CUBIC COMMUNICATIONS	RC-8451	AUDIO REMOTE CONTROL TECHNICAL MANUAL	32	Y
CUBIC COMMUNICATIONS	RT-1131	HF SSB/CW TX/RX TECHNICAL MANUAL	116	Y
CUSHMAN	CE-31A/B	FM RADIO TEST SET OWNERS MANUAL	70	Y
CYBERNET	CTX5000	VHF FM MARINE OPERATING MANUAL		
DAIWA	DK-200/210	ELECTRONIC KEYS	6	Y
DAIWA	SR-9	VHF FM RECEIVER	3	Y
DIAMOND	CSV3000	POWER SUPPLY	1	Y
DATA-I/O	22	PROM PROGRAMMER OPERATING & SERVICE		
DATA-I/O	29A	PROM PROGRAMMER	102	Y
DATA-I/O	UNIPAK2	PROM PROGRAMMER	76	Y
DATAMAN	GANG OF EIGHT	EPROM PROGRAMMER	15	Y
DATONG	ASP	AUTOMATIC SPEECH PROCESSOR BROCHURE	4	Y
DATONG	FL2	MULTIMODE AUDIO FILTER BROCHURE	4	Y
DATONG	FL2/A	AUDIO FILTER AUTO NOTCH ADD-ON BROCHURE	2	Y
DATONG	FL3	MULTIMODE AUDIO FILTER WITH AUTO NOTCH BROCHURE	4	Y
DATONG	RFC/M	RF SPEECH CLIPPER MODULE	8	Y
DATRON	1061/61A/71	DIGITAL VOLTMETER USERS HANDBOOK	75	Y
DATRON	4708	CAL & SERVICING HANDBOOK VOLS 1 & 2	549	Y
DRAKE	2-B	INSIDE THE DRAKE 2-B RECEIVER	4	Y
DRAKE	MN7	MATCHING NETWORK INSTRUCTION MANUAL	15	Y
DRAKE	PS7	POWER SUPPLY	9	Y
DRAKE	Q XER	INSTRUCTION MANUAL	7	Y
DRAKE	R-4A	RECEIVER INSTRUCTION MANUAL	39	Y
DRAKE	R-4C	RECEIVER INSTRUCTION MANUAL	36	Y
DRAKE	RV-4C	REMOTE VFO INSTRUCTION MANUAL	3	Y
DRAKE	RV7	REMOTE VFO INSTRUCTION MANUAL	6	Y
DRAKE	RV-75	REMOTE VFO INSTALLATION	13	Y
DRAKE	SP75	SPEECH PROCESSOR	13	Y
DRAKE	SW-4A	RECEIVER INSTRUCTION MANUAL	28	Y
DRAKE	T-4X	TRANSMITTER INSTRUCTION MANUAL	46	Y
DRAKE	T-4XC	TRANSMITTER INSTRUCTION MANUAL	40	Y
DRAKE	TR-4C	SIDEBAND TRANSCEIVER INSTRUCTION MANUAL		
DRAKE	TR7	HF TX/RX OPERATOR'S MANUAL	40	Y
DRAKE	TR7	HF TX/RX SERVICE MANUAL	155	Y
DRAKE	WV-4	RF WATTMETER INSTRUCTION MANUAL	14	Y
DYMAR	741	AF SIGNAL GENERATOR INSTRUCTION MANUAL	15	Y
DYMAR	1585	AF POWER METER OPERATING & SERVICE	12	Y

DYMAR	1785	AM/FM MOD METER TECHNICAL HANDBOOK	34	Y
DYMAR	2081	RF POWER METER TECHNICAL HANDBOOK	15	Y
DYMAR	M2000A	MOBILE TX/RX CIRCUIT DIAGRAMS	10	Y
DYMAR	M2080AM	VHF AM MOBILE OPERATING & SERVICE		
EATON	2075	NOISE-GAIN ANALYSER OPERATION MANUAL	177	Y
EATON	2075	NOISE-GAIN ANALYSER MAINTENANCE MANUAL		
EDDYSTONE	31A	NOISE MEASURING SET OPERATING INSTRUCTIONS		
EDDYSTONE	670A	MARINE RECEIVER INSTRUCTION MANUAL	6	Y
EDDYSTONE	710	RECEIVER INSTRUCTION MANUAL	8	Y
EDDYSTONE	770U MK II	UHF RX INSTRUCTION MANUAL	38	Y
EDDYSTONE	870A	RECEIVER INSTRUCTION MANUAL	8	Y
EDDYSTONE	888	RECEIVER INSTRUCTION MANUAL	9	Y
EDDYSTONE	990S	UHF RECEIVER OPERATING & SERVICE		
EDDYSTONE	1645	OPERATING INSTRUCTIONS & SERVICE DATA		
EDDYSTONE	1680/3T	OPERATING INSTRUCTIONS & SERVICE DATA		
EDDYSTONE	1766/3	REMOTE INTERFACE ADAPTER OPER & SERVICE DATA		
EDDYSTONE	1830	HF RECEIVER OPERATING INSTRUCTIONS & SERVICE DATA		
EDDYSTONE	1837 SERIES	OPERATING INSTRUCTIONS & SERVICE DATA		
EDDYSTONE	1990R	OPERATING INSTRUCTIONS & SERVICE DATA		
EDDYSTONE	EB35	AM/FM RECEIVER CIRCUIT	9	Y
EDDYSTONE	EB37	BROADCAST RECEIVER INSTRUCTION MANUAL	8	Y
EDDYSTONE	EC958/7	OPERATING INSTRUCTIONS & SERVICE DATA		
EDDYSTONE	EC 964	COMMS RX TECHNICAL HANDBOOK		
EDDYSTONE	EC964/7	OPERATING INSTRUCTIONS & SERVICE DATA		
EDDYSTONE	EDOMETER	DIP METER OPERATING INSTRUCTIONS	8	Y
EDDYSTONE	EP1061A	PANORAMIC DISPLAY UNIT OPERATING & SERVICE		
EDDYSTONE	Z01-9600-01 (EB37)	BROADCAST RECEIVER INSTRUCTION MANUAL	38	Y
EES	SFR060A	STANDARD FREQUENCY RECEIVER 60KHZ HANDBOOK	29	Y
EES	SFR200B	STANDARD FREQUENCY RECEIVER 200KHZ HANDBOOK	10	Y
EICO	710	GRID DIP METER INSTRUCTION MANUAL		
EIP	371	MICROWAVE FREQUENCY COUNTER OP & SERVICE (PART)	40	Y
EIP	451	MICROWAVE PULSE COUNTER OPERATING & SERVICE	238	Y
EIP	545B/548B	MICROWAVE FREQUENCY COUNTER OPERATING	58	Y
EIP	545/548	MICROWAVE FREQUENCY COUNTER SERVICE	237	Y
EIP	575/578	MICROWAVE FREQUENCY COUNTER OPERATING & SERVICE	269	Y
EIP	595A/598A	MICROWAVE FREQUENCY COUNTER OP & PROG	137	Y
EG & G	5207/5208	LOCK-IN AMPLIFIER INSTRUCTION MANUAL	160	Y
ELAN	E2A	EPROM PROGRAMMER OPERATING INSTRUCTIONS	78	Y
ELECTRONIC LABS LTD	MINI-SEAVOICE RT-50	VHF RADIO TELEPHONE TECHNICAL HANDBOOK		
ELENOS	SF150	150W BAND 2 AMPLIFIER HANDBOOK	34	Y
ELTEK	SMPS 60/20E	POWER SUPPLY MANUAL	22	Y
EMC	213-215	TUBE TESTER OPERATING MANUAL	72	Y
ENI	420L	BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL	10	Y
ENI	503L	BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL	33	Y
ENI	510L	BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL	22	Y
ENI	525LA	BROADBAND POWER AMPLIFIER OP & SERVICE MANUAL	58	Y
ENI	603L	BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL	22	Y
ENI	604L	BROADBAND POWER AMPLIFIER OPERATION MANUAL	68	Y
ENI	A-150	BROADBAND POWER AMPLIFIER OP & SERVICE MANUAL	73	Y
ENI	A300	BROADBAND POWER AMPLIFIER INSTRUCTION MANUAL	31	Y
ETM	ETM-2	KEYER	6	Y
ETM	ETM-4C	KEYER	7	Y
ETM	ETM-5C	KEYER (NO SCHEMATIC)	2	Y
ETM	ETM-8C	KEYER	7	Y
ETM	ETM-9C	MEMORY KEYER	24	Y
ETO	ALPHA 76	HF LINEAR OPERATING & SERVICE		
FARNELL	2081	RF POWER METER INSTRUCTION BOOK (DYMAR)	15	Y
FARNELL	2085	AF POWER METER INSTRUCTION BOOK	26	Y
FARNELL	AMM	AUTOMATIC MODULATION METER	41	Y
FARNELL	AP/MP SERIES	1KW BENCH POWER SUPPLY OPERATORS MANUAL	109	Y
FARNELL	DT12-5/DTV12-14	OSCILLOSCOPE INSTRUCTION BOOK	33	Y
FARNELL	DTC12	COMPONENT TESTER HANDBOOK	37	Y
FARNELL	DTC12	COMPONENT TESTER CIRCUIT	8	Y
FARNELL	E30	BENCH POWER SUPPLY INSTRUCTION BOOK	11	Y
FARNELL	E350 MK II	POWER SUPPLY INSTRUCTION MANUAL	13	Y
FARNELL	F20025	SPECIAL POWER SUPPLY TECHNICAL DESCRIPTION		
FARNELL	G SERIES	POWER SUPPLY INSTRUCTION BOOK		
FARNELL	L SERIES	BENCH POWER SUPPLY INSTRUCTION BOOK	16	Y
FARNELL	L30	POWER SUPPLY INSTRUCTION MANUAL	12	Y
FARNELL	LFM2	SINE/SQUARE OSCILLATOR INSTRUCTION BOOK	13	Y
FARNELL	LS30-10	BENCH POWER SUPPLY INSTRUCTION BOOK		
FARNELL	PDD3502A	BENCH POWER SUPPLY INSTRUCTION / SERVICE	46	Y
FARNELL	PULSE GEN	PULSE GENERATING SYSTEM		
FARNELL	S SERIES	STABILISED POWER SUPPLY INSTRUCTION BOOK		
FARNELL	SSG1000/2000	SIGNAL GENERATOR OPERATORS MANUAL	24	Y
FARNELL	SSG1000/2000	SIGNAL GENERATOR SERVICE MANUAL	159	Y
FARNELL	SSG520	SIGNAL GENERATOR INSTRUCTION BOOK		
FARNELL	SSG520	SIGNAL GENERATOR OPERATING/SERVICE MANUAL	147	Y
FARNELL	TOPS 3D	BENCH POWER SUPPLY INSTRUCTION BOOK	19	Y
FARNELL	TSV70 MK II	STABILISED VOLTAGE SUPPLY INSTRUCTION MANUAL	36	Y
FARNELL	TTS520	TEST SET OPERATING & SERVICE		

FCEL	OCEAN STAR 240	MARINE VHF INSTRUCTION MANUAL	19	Y
FDK	2000	VHF TX/RX INSTRUCTION MANUAL	18	Y
FDK	MULTI-750A/E	144MHZ ALL MODE MOBILE INSTRUCTION MANUAL	17	Y
FDK	MULTI-750A/E	144MHZ ALL MODE MOBILE SERVICE MANUAL	45	Y
FLUKE	83,85,87	MULTIMETER SERVICE MANUAL	108	Y
FLUKE	5100	SERIES B CALIBRATOR INSTRUCTION MANUAL		
FLUKE	6060A/AN	SYNTH RF SIGNAL GENERATOR INSTRUCTION MANUAL	269	Y
FLUKE	6060B	SYNTH RF SIGNAL GENERATOR INSTRUCTION MANUAL	312	Y
FLUKE	6061A	SYNTH RF SIGNAL GENERATOR INSTRUCTION MANUAL		
FLUKE	8050A	DIGITAL MULTIMETER INSTRUCTION MANUAL	80	Y
FUNKWERK DABENDORF	EKD500	RECEIVER TECHNICAL MANUAL	253	Y
FURUNO	FM-252	VHF/FM RADIOTELEPHONE		
FURUNO	FM-2510	VHF RADIOTELEPHONE OWNERS MANUAL	56	Y
FURUNO	FM-2721	VHF RADIOTELEPHONE OPERATORS MANUAL	71	Y
FURUNO	FM-8500	VHF RADIOTELEPHONE OPERATORS MANUAL	86	Y
FURUNO	FS-1570/2570	SSB RADIOTELEPHONE OPERATORS MANUAL	222	Y
FURUNO	FS-5000	SSB RADIOTELEPHONE OPERATORS MANUAL	147	Y
FURUNO	FS-8000	SSB RADIOTELEPHONE OPERATORS MANUAL	145	Y
FURUNO	LC-70	LORAN-C NAVIGATOR SERVICE MANUAL		
FURUNO	LC-80	LORAN-C NAVIGATOR SERVICE MANUAL		
FURUNO	RO4500	VHF FM MARINE RADIO OPERATORS MANUAL	22	Y
G0BSX	G0BSX	TNC	10	Y
G2DAF	G2DAF	SSB TRANSMITTER MK II & LINEAR AMPLIFIER	29	Y
G3PPD	G3PPD	INSECT FILTER	61	Y
G3RUH	G3RUH	9600 BAUD MODEM	18	Y
G4MH	MINIBEAM	ASSEMBLY INSTRUCTIONS	4	Y
GENRAD	916-A	RADIO FREQUENCY BRIDGE OPERATING & MAINTENANCE	32	Y
GENRAD	1650-A	IMPEDANCE BRIDGE OPERATING INSTRUCTIONS	32	Y
GENRAD	GR2220	BUG HOUND INSTRUCTION MANUAL	33	Y
GIGATRONICS	12000A	MICROWAVE SYNTHESIZER OPERATING	185	Y
GIGATRONICS	12000A	MICROWAVE SYNTHESIZER SERVICE (NO SCHEMATICS)	88	Y
GIGATRONICS	8035XA	PEAK POWER SENSOR OPER & MAINT(NO SCHEMS)	84	Y
GIGATRONICS	8540C	UNIVERSAL POWER METER OPER & MAINT (NO SCHEMS)	265	Y
GIGATRONICS	8650A	UNIVERSAL POWER METER OPERATING	240	Y
GLASSMAN	LV SERIES (1KW)	DC POWER SUPPLY TECHNICAL MANUAL	62	Y
GLASSMAN	LV SERIES	INTERNAL GPIB INTERFACE TECHNICAL MANUAL	42	Y
GOULD	OS1420	DIGITAL STORAGE SCOPE INSTRUCTION MANUAL		
GP	RP32	EPROM PROGRAMMER INSTRUCTIONS	45	Y
GREEN	TG-2400	TRANSMITTER OUTPUT ANALYSER OPERATING & SERVICE		
GREEN	TG2601	TERMINATING WATTMETER OPERATING & SERVICE	24	Y
GRESHAM	GX	POWER SUPPLY SERVICE MANUAL		
HALLICRAFTERS	HT32A	HF SSB TX OPERATING & SERVICE INSTRUCTIONS	34	Y
HALLICRAFTERS	HT-40	HF TRANSMITTER OPERATING & SERVICE INSTRUCTIONS	25	Y
HAMEG	HM203-6	OSCILLOSCOPE INSTRUCTION MANUAL	42	Y
HAMEG	HM205-3	OSCILLOSCOPE OPERATING & SERVICE MANUAL		
HARRIS	RF590	RECEIVER TECHNICAL MANUAL		Y
HATFIELD INSTRUMENTS	1008A	HAND-HELD DECIBEL METER	25	Y
HEATHKIT	GC-1U	MOHICAN COMMS RECEIVER	67	Y
HEATHKIT	GD-1A	GDO	20	Y
HEATHKIT	GD-1U	GRID DIP METER ASSEMBLY MANUAL	28	Y
HEATHKIT	GR-78	RECEIVER ASSEMBLY MANUAL	54	Y
HEATHKIT	HD-10	ELECTRONIC KEYSER ASSEMBLY MANUAL	50	Y
HEATHKIT	HM-11U	REFLECTED POWER METER & SWR BRIDGE	23	Y
HEATHKIT	HM-102	RF POWER METER ASSEMBLY MANUAL	32	Y
HEATHKIT	HN-31	CANTENNA DUMMY RF LOAD	17	Y
HEATHKIT	HP-23A	AC POWER SUPPLY ASSEMBLY MANUAL	30	Y
HEATHKIT	HW-7	QRP TRANSCEIVER ASSEMBLY MANUAL	23	Y
HEATHKIT	HW-32	20M SSB TRANSCEIVER	41	Y
HEATHKIT	HW-100	SSB TRANSCEIVER ASSEMBLY MANUAL		
HEATHKIT	HW-101	SSB TRANSCEIVER ASSEMBLY MANUAL		
HEATHKIT	IP-17	REGULATED HIGH VOLTAGE POWER SUPPLY ASSEMBLY		
HEATHKIT	RF-1U	SIGNAL GENERATOR ASSEMBLY MANUAL	34	Y
HEATHKIT	RG1	RECEIVER ASSEMBLY & USER MANUAL		
HEATHKIT	SB-101	SSB TRANSCEIVER ASSEMBLY MANUAL		
HEATHKIT	SB-102	SSB TRANSCEIVER ASSEMBLY MANUAL		
HEATHKIT	SB-200	HF LINEAR	11	Y
HEATHKIT	SB-401	SSB TRANSMITTER ASSEMBLY MANUAL		
HEATHKIT	SB-401	SSB TRANSMITTER SPECIFICATIONS	8	Y
HEATHKIT	SB-610	MONITOR SCOPE	30	Y
HEATHKIT	SB-620	SCANALYZER ASSEMBLY MANUAL	100	Y
HEATHKIT	SB-620	SCANALYZER SPECIFICATIONS	6	Y
HELPER	SINADDER 3	SINAD MEASUREMENT METER INSTRUCTION MANUAL	7	Y
HENRY	4K	HF LINEAR OPERATING & MAINTENANCE MANUAL	25	Y
HITACHI	V-1050	OSCILLOSCOPE OPERATING MANUAL	52	Y
HITACHI	V-1050	OSCILLOSCOPE SERVICE MANUAL	106	Y
HITACHI	V-1065/1060/665/660	OSCILLOSCOPE OPERATION MANUAL (WITH SCHEMATICS)	79	Y
HITACHI	V-1065A/1060/665A/660	OSCILLOSCOPE SERVICE MANUAL	131	Y
HITACHI	V-1100A	OSCILLOSCOPE OPERATION MANUAL	83	Y
HITACHI	V-1100A/1070A	OSCILLOSCOPE SERVICE MANUAL	96	Y
HITACHI	V-1150	OSCILLOSCOPE OPERATION MANUAL	133	Y
HITACHI	V-1150	OSCILLOSCOPE SERVICE MANUAL	172	Y

HITACHI	V-425/V-225	OSCILLOSCOPE SERVICE MANUAL	77	Y
HITACHI	V-509	OSCILLOSCOPE SERVICE MANUAL	52	Y
HITACHI	V-522/V-523/V-525	OSCILLOSCOPE OPERATION MANUAL (WITH SCHEMATICS)	71	Y
HITACHI	V-680	OSCILLOSCOPE SERVICE MANUAL	112	Y
HITACHI	VC-5430	OSCILLOSCOPE SERVICE MANUAL	80	Y
HITACHI	VC-6015	OSCILLOSCOPE SERVICE MANUAL	46	Y
HITACHI	VC-6025/6045	OSCILLOSCOPE SERVICE MANUAL	192	Y
HITACHI	VC-6025A/6045A	OSCILLOSCOPE SERVICE MANUAL	54	Y
HITACHI	VC-6145	OSCILLOSCOPE SERVICE MANUAL	200	Y
HITACHI	VC-6023/6024	OSCILLOSCOPE SERVICE MANUAL	110	Y
HITACHI	VM-900	VIDEO MONITOR SERVICE MANUAL	46	Y
HITACHI	VM-910A	VIDEO MONITOR SERVICE MANUAL	25	Y
HUNTRON	1000 SERIES	TRACKER INSTRUCTION MANUAL	140	Y
HUNTRON	1005B-1S/ES/JS	TRACKER OPERATOR MANUAL	96	Y
HUNTRON	1005B-1S/ES/JS	TRACKER MAINTENANCE MANUAL	33	Y
HUNTRON	2000	TRACKER INSTRUCTION MANUAL	33	Y
HYGAIN	TH-7DX	BROADBAND SUPER THUNDERBIRD	31	Y
HYGAIN	THB3 JR	3 ELE HF BEAM INSTRUCTION MANUAL	11	Y
IFR	2026	MULTISOURCE GENERATOR	281	Y
IFR	2030	AM/FM SIGNAL GENERATOR OPERATING MANUAL		
IFR	2945A	COMMS SERVICE MONITOR OPERATING MANUAL		
IFR	2975	COMMS TEST SET OPERATION MANUAL	177	Y
IFR	2975	COMMS TEST SET OPERATION MANUAL SUPPLEMENT	33	Y
IFR	2975	COMMS TEST SET P25 TRUNKING OPTION	27	Y
IFR	2975	COMMS TEST SET SMARTNET OPTION	29	Y
IFR	A-7550	SPECTRUM ANALYZER ILLUSTRATED PARTS CATALOG	244	Y
IFR	A-7550	SPECTRUM ANALYZER MAINTENANCE MANUAL	446	Y
IFR	FM/AM-1000S/A	COMMS SERVICE MONITOR MAINTENANCE MANUAL	585	Y
IFR	FM/AM-1000S/A	COMMS SERVICE MONITOR OPERATING MANUAL	232	Y
IFR	FM/AM-1100S	COMMS SERVICE MONITOR CALIBRATION MANUAL	43	Y
IFR	FM/AM-1100S/A	COMMS SERVICE MONITOR OPERATING MANUAL	202	Y
IFR	FM/AM-1200	COMMS SERVICE MONITOR OPERATING MANUAL	105	Y
IFR	FM/AM-1200	ILLUSTRATED PARTS CATALOG	175	Y
IFR	FM/AM-1200S/A	COMMS SERVICE MONITOR OPERATING MANUAL	127	Y
IFR	FM/AM-1200S/A	COMMS SERVICE MONITOR SERVICE MANUAL	491	Y
IFR	FM/AM-1600S/CSA	CELLULAR PROTOCOL ANALYZER OPERATING	458	Y
IFR	FM/AM-500/A	COMMS SERVICE MONITOR MAINTENANCE MANUAL	362	Y
IFR	MM-100	MULTIMETER OPERATION MANUAL	40	Y
IFR	MM-100	MULTIMETER MAINTENANCE MANUAL	108	Y
IFR	MM-100E	MULTIMETER OPERATION & MAINTENANCE MANUAL	114	Y
IND.INSTRU	TRANSIPACK 306	POWER SUPPLY OPERATING & SERVICE MANUAL		
INTERQUAD	LX1564/1460	VGA MONITOR SERVICE MANUAL		
ITT	FRX5	UHF FM FIXED STATION RECEIVER SERVICE MANUAL		
ITTMARINE	ST1680A	RADIO TRANSMITTER OPERATING & SERVICE	145	Y
IWATSU	SS-5702	OSCILLOSCOPE INSTRUCTION MANUAL	78	Y
IWATSU	SS-5710	OSCILLOSCOPE INSTRUCTION MANUAL	179	Y
IWATSU	SS-7840	OSCILLOSCOPE OPERATION MANUAL	75	Y
JIL	SX-200(N)	SCANNING MONITOR RECEIVER SERVICE MANUAL	41	Y
JOHNSON	FLEETCOM II 559/1559	UHF MOBILE SERVICE INFORMATION MANUAL	23	Y
JPS	ANC-4	ANTENNA NOISE CANCELLER INSTRUCTION MANUAL	17	Y
JPS	NIR-10	NOISE / INTERFERENCE REDUCTION UNIT INSTRUCTION	37	Y
KALMUS	520FC	WIDEBAND RF POWER AMPLIFIER	17	Y
KANDA	AVR & 51 series	PROGRAMMER OPERATING INSTRUCTIONS	12	Y
KANTRONICS	KAM98	TNC USERS GUIDE	384	Y
KANTRONICS	KPC3	TNC USERS GUIDE		
KANTRONICS	KPC3 V 6.0	MANUAL ADDENDUM	19	Y
KANTRONICS	KPC3+	TNC USERS GUIDE	314	Y
KANTRONICS	KPC9612	TNC USERS GUIDE	95	Y
KANTRONICS	KPC9612+	TNC USERS GUIDE	348	Y
KATSUMI	MK1024	KEYER	7	Y
KDK	FM-2030	144MHZ FM MOBILE INSTRUCTION MANUAL	21	Y
KEITHLEY	196	DMM INSTRUCTION MANUAL		
KEITHLEY	247	HIGH VOLTAGE SUPPLY INSTRUCTION MANUAL		
KEITHLEY	2010	MULTIMETER SERVICE MANUAL		
KENPRODUCT	KP-12A	RF SPEECH PROCESSOR OPERATING MANUAL		
KENPRO	KR-600RC	ROTATOR INSTRUCTION MANUAL	17	Y
KENPRO	KR-2000RC	ROTATOR INSTRUCTION MANUAL	18	Y
KENT	KEYER	ELECTRONIC KEYER OPERATING MANUAL		
KEY	SEE KYODO			
KINGSHILL	NS & NM SERIES	POWER SUPPLY TECHNICAL DATA		
KROHN-HITE	3800	NARROW BAND TRACKING FILTER OPERATING & MAINT	49	Y
KW	KW1000	LINEAR AMPLIFIER INSTRUCTION MANUAL	8	Y
KYODO	KG105-08A/B	VHF FM MOBILE SERVICE MANUAL		
KYODO	KG105-15A/B	VHF FM MOBILE SERVICE MANUAL 136-174MHZ	121	Y
KYODO	KG105-40A/B/C/D/E/F	UHF FM MOBILE SERVICE MANUAL		
LAFAYETTE	KT-340	COMMUNICATIONS RECEIVER ASSEMBLY MANUAL	30	Y
LAKE	DTR3	80M CW TRANSCEIVER		
LAKE	DTR7-5	5 WATT CW TRANSCEIVER INSTALL & OP.	48	Y
LAMBDA	LFS-42	SERIES POWER SUPPLY SERVICE MANUAL		
LAMBDA	LNS-Y	POWER SUPPLY OPERATING & SERVICE MANUAL		
LECROY	7200A	MODULAR OSCILLOSCOPE OPERATORS MANUAL	481	Y

LECROY	7200A	MODULAR OSCILLOSCOPE REMOTE CONTROL	456	Y
LECROY	9300C SERIES	DIGITAL OSCILLOSCOPE OPERATORS MANUAL	258	Y
LECROY	9400A	DIGITAL OSCILLOSCOPE OPERATORS MANUAL	208	Y
LECROY	9424 SERIES	DIGITAL OSCILLOSCOPE OPERATORS MANUAL	220	Y
LECROY	94XX SERIES	REMOTE CONTROL MANUAL	232	Y
LECROY	LC SERIES	DIGITAL OSCILLOSCOPE HANDS ON MANUAL	213	Y
LECROY	LC SERIES	DIGITAL OSCILLOSCOPE OPERATORS MANUAL	294	Y
LECROY	LC SERIES	DIGITAL OSCILLOSCOPE REMOTE CONTROL	300	Y
LECROY	LITERUNNER	DIGITAL OSCILLOSCOPE OPERATORS MANUAL	102	Y
LECROY	LSA1000	REMOTE CONTROL MANUAL	234	Y
LECROY	WAVERUNNER	LAN OPTION	25	Y
LECROY	WAVERUNNER	DIGITAL OSCILLOSCOPE OPERATORS MANUAL	262	Y
LECROY	WAVERUNNER	REMOTE CONTROL MANUAL	286	Y
LECROY	WAVERUNNER-2	DIGITAL OSCILLOSCOPE OPERATORS MANUAL	322	Y
LECROY	WAVERUNNER-2	QUICK REF GUIDE	8	Y
LEVELL	SHORTFORMCAT	SHORT FORM CATALOGUE	4	Y
LEVELL	TG152	AUDIO OSCILLATOR INSTRUCTION MANUAL	8	Y
LEVELL	TG200DMP	AUDIO OSCILLATOR INSTRUCTION MANUAL	10	Y
LLOYD RESEARCH	L9000	PROGRAMMER INSTRUCTION MANUAL		
LOWE	HF-125	HF RECEIVER USER MANUAL	26	Y
LOWE	HF-150	HF RECEIVER USER MANUAL	36	Y
LOWE	HF-150	HF RECEIVER TECHNICAL MANUAL	39	Y
LOWE	SRX30A	HF RECEIVER OPERATING MANUAL		
LYONS INSTRUMENTS	D10	DISTORTION METER OPERATING & SERVICE MANUAL	17	Y
MACOM	RAPAC	CENTRAL STATION OPERATION & MAINT MANUAL		
MACOM	RAPAC	MONITOR & TEST UNIT OPERATOR'S MANUAL		
MARCONI	2017	SIGNAL GENERATOR OPERATING MANUAL	37	Y
MARCONI	2017	SIGNAL GENERATOR SERVICE MANUAL	321	Y
MARCONI	2018.2019	SIGNAL GENERATOR OPERATING MANUAL	29	Y
MARCONI	2018.2019	SIGNAL GENERATOR SERVICE MANUAL	261	Y
MARCONI	2022	SIGNAL GENERATOR OPERATING MANUAL	49	Y
MARCONI	2022C	SIGNAL GENERATOR OPERATING & SERVICE MANUAL	244	Y
MARCONI	2022D	SIGNAL GENERATOR OPERATING MANUAL	59	Y
MARCONI	2022E	SIGNAL GENERATOR OPERATING MANUAL	48	Y
MARCONI	2022E	SIGNAL GENERATOR SERVICE MANUAL A3	30	Y
MARCONI	2022E	SIGNAL GENERATOR SERVICE MANUAL A4	164	Y
MARCONI	2023.2024	AM/FM SIGNAL GENERATOR OPERATING MANUAL	223	Y
MARCONI	2023 A/B 2024 2025	AM/FM SIGNAL GENERATOR MAINT (NO SCHEMATICS)	214	Y
MARCONI	2030 series	AM/FM SIGNAL GENERATOR OPERATING MANUAL	283	Y
MARCONI	2050	SIGNAL GENERATOR OPERATING MANUAL		
MARCONI	2304	MODULATION METER INSTRUCTION MANUAL	58	Y
MARCONI	2305	MODULATION METER OPERATING MANUAL	67	Y
MARCONI	2305	MODULATION METER SERVICE MANUAL	291	Y
MARCONI	2306	PROGRAMMABLE INTERFACE OPERATING MANUAL		
MARCONI	2310	TETRA SIGNAL ANALYZER OPERATING MANUAL		
MARCONI	2365	75 OHM COAXIAL SWITCH UNIT INSTRUCTION MANUAL		
MARCONI	2380	DISPLAY OPERATING PRECAUTIONS	9	Y
MARCONI	2380	SPECTRUM ANALYSER DISPLAY UNIT SERVICE MANUAL	334	Y
MARCONI	2382.2380	SPECTRUM ANALYSER OPERATING MANUAL	119	Y
MARCONI	2382	100HZ-400MHZ RF UNIT SERVICE MANUAL	656	Y
MARCONI	2382.2380	SPECTRUM ANALYSER AND DISPLAY GPIB OPERATING	61	Y
MARCONI	2383	100HZ-4.2GHZ RF UNIT SERVICE MANUAL	620	Y
MARCONI	2435	2 GHz FREQUENCY COUNTER OPERATING MANUAL	34	Y
MARCONI	2440	20 GHz MICROWAVE COUNTER OPERATING MANUAL	45	Y
MARCONI	2442	26.5 GHz MICROWAVE COUNTER OPERATING MANUAL	46	Y
MARCONI	2830	MULTIPLEX TESTER OPERATING MANUAL		
MARCONI	2955	RADIO TEST SET INTRO GUIDE	56	Y
MARCONI	2955	RADIO TEST SET OPERATING MANUAL	80	Y
MARCONI	2955	RADIO TEST SET SERVICE MANUAL	399	Y
MARCONI	2955A	RADIO TEST SET INTRO GUIDE	52	Y
MARCONI	2955A/R	RADIO TEST SET INTRO GUIDE	55	Y
MARCONI	2955A/R	RADIO TEST SET OPERATING	176	Y
MARCONI	2955A/R	RADIO TEST SET PROGRAMMING	33	Y
MARCONI	2955A/R	RADIO TEST SET SERVICE MANUAL	433	Y
MARCONI	2955B	RADIO TEST SET OPERATING MANUAL	127	Y
MARCONI	2958	CELLULAR RADIO TEST SYSTEM OPERATING MANUAL	141	Y
MARCONI	2960	RADIO TEST SYSTEM OPERATING MANUAL	67	Y
MARCONI	2965/2965A/2966A/2967	RADIO TEST SET MAINTENANCE VOLUME 1	594	Y
MARCONI	2965/2965A/2966A/2967	RADIO TEST SET MAINTENANCE VOLUME 2	408	Y
MARCONI	2965	RADIO TEST SET OPERATING MANUAL	178	Y
MARCONI	2965A/66A/67	RADIO TEST SET PROGRAMMING	559	Y
MARCONI	2968	RADIO TEST SET FOR TETRA PHASE 1 OPERATING		
MARCONI	2968	RADIO TEST SET FOR TETRA PHASE 2 OPERATING		
MARCONI	6050/3	FREQUENCY METER INSTRUCTION MANUAL	8	Y
MARCONI	6055	SIGNAL SOURCE INSTRUCTION MANUAL	19	Y
MARCONI	6056A	SIGNAL SOURCE INSTRUCTION MANUAL	27	Y
MARCONI	6058	SIGNAL SOURCE INSTRUCTION MANUAL	21	Y
MARCONI	6150A	SERIES SIGNAL SOURCE INSTRUCTION MANUAL		
MARCONI	6460	POWER METER INSTRUCTION MANUAL	43	Y
MARCONI	6555	POWER METER INSTRUCTION MANUAL		
MARCONI	6590B	POWER SUPPLY INSTRUCTION MANUAL		

MARCONI	6600A	MICROWAVE SWEEP OSC INSTRUCTION MANUAL	100	Y
MARCONI	6633	MICROWAVE SWEEP OSC PLUG-IN INSTRUCTION MANUAL		
MARCONI	6647	MICROWAVE SWEEP OSC PLUG-IN INSTRUCTION MANUAL	54	Y
MARCONI	6650	MICROWAVE SWEEP OSC PLUG-IN INSTRUCTION MANUAL		
MARCONI	6651	MICROWAVE SWEEP OSC PLUG-IN INSTRUCTION MANUAL		
MARCONI	6700B	SWEEP OSCILLATOR (MAINFRAME) INSTRUCTION MANUAL	99	Y
MARCONI	6910	POWER SENSOR INSTRUCTION MANUAL	16	Y
MARCONI	6950	POWER METER OPERATING MANUAL	22	Y
MARCONI	6960B	POWER METER OPERATING MANUAL	61	Y
MARCONI	893B	AF POWER METER INSTRUCTION MANUAL	23	Y
MARCONI	CR100	HF RECEIVER	73	Y
MARCONI	CR150/6	HF RECEIVER	72	Y
MARCONI	CT1454	100W SELF-TUNING AMPLIFIER SERVICE MANUAL		
MARCONI	CT4278	SCIMITAR HF SSB RADIO VOLUME 4 SERVICE MANUAL		
MARCONI	GPIB	THE GPIB MANUAL	52	Y
MARCONI	MARCOM II	DK61/62 UHF BASE STATION SERVICE MANUAL		
MARCONI	OA2090B	WHITE NOISE TEST SET INSTRUCTION MANUAL	77	Y
MARCONI	SCIMITAR V	VHF RADIO FMU AND FILL GUN BASE WORKSHOP MANUAL	110	Y
MARCONI	SCIMITAR V	VHF RADIO POWER AMPLIFIER BASE WORKSHOP MANUAL	38	Y
MARCONI	TETRA	INTRODUCTION TO TETRA	43	Y
MARCONI	TF1026	FREQUENCY METER OPERATING & MAINTENANCE	35	Y
MARCONI	TF1313A	UNIVERSAL BRIDGE INSTRUCTION MANUAL	52	Y
MARCONI	TF144H series II	SIGNAL GENERATOR OPERATING & MAINTENANCE	59	Y
MARCONI	TF1417/2	COUNTER/FREQUENCY METER OPERATING	27	Y
MARCONI	TF2015	SIGNAL GENERATOR INSTRUCTION MANUAL	57	Y
MARCONI	TF2163	UHF ATTENUATOR INSTRUCTION MANUAL	18	Y
MARCONI	TF2169	PULSE MODULATOR INSTRUCTION MANUAL	20	Y
MARCONI	TF2170B	DIGITAL SYNCHRONIZER INSTRUCTION MANUAL	34	Y
MARCONI	TF2171	DIGITAL SYNCHRONIZER INSTRUCTION MANUAL	39	Y
MARCONI	TF2173	DIGITAL SYNCHRONIZER INSTRUCTION MANUAL	57	Y
MARCONI	TF2175	RF POWER AMPLIFIER INSTRUCTION MANUAL	23	Y
MARCONI	TF2200	OSCILLOSCOPE VOLUME 1		
MARCONI	TF2200	OSCILLOSCOPE VOLUME 3		
MARCONI	TF2300A	MODULATION METER INSTRUCTION MANUAL	75	Y
MARCONI	TF2303	MODULATION METER INSTRUCTION MANUAL	52	Y
MARCONI	TF2337A	AUTO DISTORTION METER OPER & MAINT.	43	Y
MARCONI	TF2356 & TF2357A	20MHZ SLMS OPERATING MANUAL	75	Y
MARCONI	TF2370	SPECTRUM ANALYSER INSTRUCTION MANUAL	297	Y
MARCONI	TF2371	200 MHZ SPECTRUM ANALYSER OPERATING MANUAL	46	Y
MARCONI	TF2371	200 MHZ SPECTRUM ANALYSER SERVICE MANUAL	289	Y
MARCONI	TF2400	10-110MHZ CONVERTER INSTRUCTION MANUAL	39	Y
MARCONI	TF2431	FREQUENCY COUNTER INSTRUCTION MANUAL	33	Y
MARCONI	TF2432	FREQUENCY COUNTER INSTRUCTION MANUAL	36	Y
MARCONI	TF2600	SENSITIVE VALVE VOLTMETER INSTRUCTION MANUAL	23	Y
MARCONI	TF2603	RF MILLIVOLTMETER	52	Y
MARCONI	TF2604	ELECTRONIC VOLTMETER INSTRUCTION MANUAL	35	Y
MARCONI	TF2610	TRUE RMS VOLTMETER OPERATING MANUAL	34	Y
MARCONI	TF2610	TRUE RMS VOLTMETER SERVICE MANUAL	87	Y
MARCONI	TF2650	FET MULTIMETER	19	Y
MARCONI	TF2700	UNIVERSAL BRIDGE INSTRUCTION MANUAL	38	Y
MARCONI	TF2950	MOBILE RADIO TEST SET INSTRUCTION MANUAL		
MARCONI	TF2952	RT TEST SET OPERATING MANUAL	31	Y
MARCONI	TF2952	RT TEST SET SERVICE MANUAL	223	Y
MARCONI	TF791D	DEVIATION METER OPERATING & SERVICE MANUAL		
MARCONI	TF893A	AF POWER METER OPERATING & MAINTENANCE	21	Y
MARCONI	TF995B/2	SIGNAL GENERATOR INSTRUCTION MANUAL	48	Y
MARCONI	TK2366	BASEBAND FILTER UNIT INSTRUCTION MANUAL		
MARCONI	TK2373	FREQUENCY EXTENDER SERVICE MANUAL	137	Y
MARCONI	TK2374	ZERO LOSS PROBE INSTRUCTION MANUAL	18	Y
MARCONI	TK2375	TRACKING GENERATOR AMPLIFIER INSTRUCTION MANUAL	12	Y
MARCONI	TM7164	100-500MHZ CONVERTER	28	Y
MARCONI	TM9954	LOGARITHMIC AMPLIFIER INSTRUCTION MANUAL	10	Y
MARCONI	THE Q METER	THEORY AND PRACTICE	33	Y
MARCONI MARINE	BANTAM	FM VHF RADIOTELEPHONE INSTRUCTION MANUAL	51	Y
MARCONI MARINE	EC 1837/1F	SUPPLEMENT No. 1	41	Y
MARCONI MARINE	GUARDIAN	RECEIVER INSTRUCTION MANUAL		
MARCONI MARINE	LIFEGUARD 3	AUTOMATIC ALARM RECEIVER INSTRUCTION MANUAL	80	Y
MARCONI MARINE	PACIFIC	RECEIVER PROVISIONAL CIRCUIT DIAGRAMS	26	Y
MARCONI MARINE	WARDEN III	WATCHKEEPING RECEIVER INSTRUCTION MANUAL	34	Y
MAXON	CGX0500	FM HANDHELD SERVICE MANUAL	39	Y
MAXON	CGX4010	VHF MOBILE SERVICE MANUAL	55	Y
MAXON	CGX4020	UHF MOBILE SERVICE MANUAL	43	Y
MAXON	CP-0510/0511	SCHEMATICS	6	Y
MAXON	CP-0520/0521	5 WATT UHF HANDHELD SERVICE MANUAL	42	Y
MAXON	SM2000(PM100)	FM MOBILE	72	Y
MAXON	SMP-4000	PROGRAMMER MANUAL	40	Y
MEGURO	MAK-6581	AUDIO ANALYZER INSTRUCTION MANUAL	86	Y
MFJ	219	UHF SWR ANALYSER OPERATING MANUAL		
MFJ	8621	PACKET ONLY DATA RADIO OPERATING MANUAL	16	Y
MFJ	1270C	TNC (NO CIRCUITS)	264	Y
MFJ	462B	MULTIREADER OPERATING MANUAL		

MICROWAVEMODULES	MM1500	1.5GHZ TX/RX SERVICE MANUAL		
MICROWAVEMODULES	MMA144V	144MHZ RF SWITCHED PRE-AMP	2	Y
MICROWAVEMODULES	MMC144-28	144MHZ CONVERTER	4	Y
MICROWAVEMODULES	MMC50	28- 50MHZ CONVERTER	4	Y
MICROWAVEMODULES	MML106	106 MHZ PA CONVERSION TO 144MHZ	7	Y
MICROWAVEMODULES	MTV3010	S-BAND FM TV TRANSMITTER INSTRUCTION MANUAL		
MIDLAND	70-250B	UHF FM HANDHELD SERVICE MANUAL		
MIDLAND	70-325	VHF MOBILE SERVICE MANUAL		
MIDLAND	70-335	VHF MOBILE SERVICE MANUAL		
MIDLAND	70-340	MOBILE TX/RX OPERATING & SERVICE MANUAL		
MIDLAND	70-375	VHF MOBILE SERVICE MANUAL		
MIDLAND	70-380/480	MOBILE TX/RX SERVICE MANUAL	107	Y
MIDLAND	70-435	VHF MOBILE SERVICE MANUAL		
MIDLAND	70-565/665	MOBILE TX/RX SERVICE MANUAL	105	Y
MIDLAND	70-650B	UHF MOBILE SERVICE MANUAL		
MILES HIVOLT	TH25	HIGH VOLTAGE SUPPLY INSTRUCTION MANUAL	20	Y
MIRAGE	A-1015-G	6M AMPLIFIER	6	Y
MIZUHO	SB-2M	144MHZ SSB/CW TRANSCEIVER INSTRUCTION MANUAL	10	Y
MODAR	TRITON	MARINE RADIO OP & MAINTENANCE MANUAL		
MODAR	TRITON 55/75	MARINE RADIO OP & MAINTENANCE MANUAL		
MOTOROLA	ASTRO	RADIO SERVICE SOFTWARE USER GUIDE	440	Y
MOTOROLA	GM300	SERVICE MANUAL	93	Y
MOTOROLA	GP900	TECHNICAL MANUAL	120	Y
MOTOROLA	GP1200	SEE GP900	120	Y
MOTOROLA	GP3600	SEE GP900	120	Y
MOTOROLA	HT440	PORTABLE RADIO SERVICE MANUAL	24	Y
MOTOROLA	HT800	HANDHELD OPERATING INSTRUCTIONS	22	Y
MOTOROLA	HT800	HANDHELD THEORY/MAINTENANCE MANUAL	46	Y
MOTOROLA	HT800	HANDHELD 146-162, 157-174 SERVICE MANUAL	44	Y
MOTOROLA	HT1100	SEE GP900	120	Y
MOTOROLA	MAXAR	HIGH BAND MOBILE SERVICE MANUAL		
MOTOROLA	MC 80 (VHF)	VHF MOBILE SERVICE MANUAL	44	Y
MOTOROLA	MC 80 (UHF)	UHF MOBILE SERVICE MANUAL	47	Y
MOTOROLA	MC COMPACT	BASE STATION & REPEATER SERVICE MANUAL		
MOTOROLA	MCX100	MOBILE TX/RX SERVICE MANUAL	43	Y
MOTOROLA	MICOR	UHF BASE STATION SERVICE MANUAL		
MOTOROLA	MITREK	VHF MOBILE INSTRUCTION MANUAL	108	Y
MOTOROLA	MSR 2000	VHF BASE STATION SERVICE MANUAL		
MOTOROLA	MT700	SINGLE-UNIT BATTERY CHARGER	10	Y
MOTOROLA	MT 700	FM UHF HANDHELD INSTRUCTION MANUAL	45	Y
MOTOROLA	MT 700	FM UHF HANDHELD SERVICE MANUAL	31	Y
MOTOROLA	MT2100	SEE GP900	120	Y
MOTOROLA	MTS2000	SEE GP900	120	Y
MOTOROLA	MX 300	HIGH BAND HANDHELD SERVICE MANUAL		
MOTOROLA	MX 300	LOW BAND HANDHELD THEORY/TROUBLESHOOTING		
MOTOROLA	MX 300 BC	BATTERY CHARGER SERVICE MANUAL		
MOTOROLA	MX300	CONVERTA-COM CONSOLE INSTRUCTION MANUAL	47	Y
MOTOROLA	MX1000	68-88 MHZ SERVICE MANUAL	32	Y
MOTOROLA	MX1000	146-174 MHZ SERVICE MANUAL	30	Y
MOTOROLA	MX3000	OPERATING INSTRUCTIONS		
MOTOROLA	N1275A	UHF POWER AMPLIFIER	17	Y
MOTOROLA	P210	FM HANDHELD OPERATING & SERVICE MANUAL		
MOTOROLA	PTX1200	SEE GP900	120	Y
MOTOROLA	PTX3600	SEE GP900	120	Y
MOTOROLA	R1013A	SINAD METER	11	Y
MOTOROLA	R-1200A	SERVICE MONITOR OPERATING & MAINTENANCE MANUAL	467	Y
MOTOROLA	R-1201A	SIGNAL GENERATOR OPERATING & SERVICE MANUAL	314	Y
MOTOROLA	R-2001D	COMMS SYSTEM ANALYSER OPERATOR'S MANUAL	95	Y
MOTOROLA	R-2002D/2009D/2011D	COMMS SYSTEM ANALYSER OPERATOR'S MANUAL	55	Y
MOTOROLA	R2008D/R2010D	COMMS SYSTEM ANALYSER OPERATOR'S MANUAL	43	Y
MOTOROLA	R-2200A	COMMS SERVICE MONITOR OPERATORS MANUAL	28	Y
MOTOROLA	R-2200A	COMMS SERVICE MONITOR SERVICE MANUAL	261	Y
MOTOROLA	R-2200,R-2400	COMMS SERVICE MONITOR OPERATORS MANUAL	42	Y
MOTOROLA	R-2550,R-2600	COMMS SYSTEM ANALYZER PROGRAMMING REFERENCE	198	Y
MOTOROLA	R-2600	COMMS SYSTEM ANALYZER OPERATING MANUAL	103	Y
MOTOROLA	R-2600A	COMMS SYSTEM ANALYZER MAINTENANCE MANUAL	502	Y
MOTOROLA	RTX-4005B	PORTABLE RADIO TEST SET	10	Y
MOTOROLA	SABER	VEHICULAR ADAPTER INSTRUCTION MANUAL	26	Y
MOTOROLA	SECURE MODULES	SUPPLEMENT FOR MTS 2000 RADIOS	19	Y
MOTOROLA	STARPOINT	1.5GHZ TX/RX INSTRUCTION MANUAL	11	Y
MOTOROLA	TONE REMOTE	CONTROL CONSOLE INSTRUCTION MANUAL		
MOTOROLA	TRITON	MODAR MARINE RADIO OP & MAINTENANCE MANUAL		
MOTOROLA	TRITON 55/75	MODAR MARINE RADIO OP & MAINTENANCE MANUAL		
MOTOROLA	VISAR	SERVICE WITH THEORY / MAINTENANCE	124	Y
MUTEK	GFBA144E	2M LNA INSTRUCTION MANUAL		
MUTEK	GLNA432E	70CM LNA INSTRUCTION MANUAL		
MUTEK	SBLA	2M PREAMP INSTRUCTION MANUAL		
MUTEK	TLNA432	432MHZ PREAMP INSTRUCTION MANUAL		
NABISHI	901V/9100V	HANDPORTABLE/MOBILE SERVICE MANUAL	53	Y
NARDA	XT	NARDALERT XT USER'S GUIDE	36	Y
NAVICO	AMR1000/1000S	2M FM MOBILE OPERATING & SERVICE MANUAL	72	Y

NAVICO	RT6500B	VHF MARINE TECHNICAL MANUAL	34	Y
NEC	ATR-400M	UHF MOBILE SERVICE MANUAL		
NEMS-CLARKE	1907	SPECIAL PURPOSE RECEIVER INSTRUCTION BOOK	49	Y
NEUWIRTH	FOG A5	TONE GEN/DECODER SERVICE (IN GERMAN)		
NEUWIRTH	FOGA 5	SELECTIVE CALL TEST SET USER MANUAL	20	Y
NORSK-MAR	NM1406B	UHF TV AMPLIFIER SERVICE MANUAL		
NATIONAL	HRO-500	SOLID STATE COMMS RECEIVER INSTRUCTION MANUAL	61	Y
OYSTER	+4	HANDHELD DATA TERMINAL	14	Y
PAC-COMM	SPIRIT-2	TNC	206	Y
PAC-COMM	TINY2	TNC	81	Y
PAC-COMM	TNC220	TNC INSTRUCTION MANUAL		
PACE	FM3625	FLEETMASTER TX/RX SERVICE MANUAL	77	Y
PACE	PRD800/900	SATELLITE RECEIVER OPERATING & SERVICE MANUAL		
PAE	1700	SCANNING RECEIVER OPERATING MANUAL	9	Y
PAE	1700	SCANNING RECEIVER TECHNICAL HANDBOOK	42	Y
PAE	ADA2000	ANTENNA DISTRIBUTION AMPLIFIER TECHNICAL HANDBOOK	14	Y
PALOMAR	RX NOISE BRIDGE	OPERATORS MANUAL	10	Y
PANDA	PR120V	HF TX INSTRUCTIONS	16	Y
PEAK	DCA50e	COMPONENT ANALYSER USER GUIDE	8	Y
PHILIPS	502P	VHF FM HANDHELD SERVICE MANUAL		
PHILIPS	BC34	BATTERY CHARGER SERVICE MANUAL	7	Y
PHILIPS	BC40	BATTERY CHARGER SERVICE MANUAL	12	Y
PHILIPS	F494/F496	VHF/UHF BASE STATION SERVICE MANUAL		
PHILIPS	FM1000 SERIES	VHF/UHF FM MOBILE SERVICE MANUAL	170	Y
PHILIPS	FM1100	BASIC CONSOLE USERS GUIDE	18	Y
PHILIPS	FM1100	KEYPAD CONSOLE USERS GUIDE	14	Y
PHILIPS	FM1100	STD CONSOLE USERS GUIDE	28	Y
PHILIPS	FM1100	FIELD SERVICE AID USER MANUAL	42	Y
PHILIPS	FM1100	VHF/UHF FM MOBILE SERVICE MANUAL	294	Y
PHILIPS	FM1200	VHF/UHF FM MOBILE USERS GUIDE	24	Y
PHILIPS	FM1200	COMPREHENSIVE DATA PROGRAMMER USER MANUAL	134	Y
PHILIPS	FM1200/FM1300	SUPPLEMENT TO SERVICE MANUAL	98	Y
PHILIPS	FM1300	COMPREHENSIVE DATA PROGRAMMER USER MANUAL	75	Y
PHILIPS	FR5000	VHF BASE STATION SERVICE MANUAL	213	Y
PHILIPS	LM40	VHF/UHF MOBILE SERVICE MANUAL	49	Y
PHILIPS	LM60/LM70	VHF/UHF MOBILE SERVICE MANUAL	60	Y
PHILIPS	LP1510	VHF/UHF FM PORTABLE USER GUIDE	2	Y
PHILIPS	LP20	VHF/UHF FM PORTABLE SERVICE MANUAL	52	Y
PHILIPS	LP30	VHF/UHF FM PORTABLE SERVICE MANUAL	25	Y
PHILIPS	LP70	VHF/UHF FM PORTABLE SERVICE MANUAL	117	Y
PHILIPS	M81S	BASE STATION CONTROLLER SERVICE MANUAL	42	Y
PHILIPS	MX295	VHF FM MOBILE SERVICE MANUAL		
PHILIPS	P1002/P1012	VHF/UHF PORTABLE TRANSCEIVER SERVICE MANUAL	68	Y
PHILIPS	P1020/P1030	VHF/UHF PORTABLE TRANSCEIVER SERVICE MANUAL	46	Y
PHILIPS	PM2120	UNIVERSAL SWITCH	4	Y
PHILIPS	PM2534/35	WITH PM9190 RS232 INTERFACE	22	Y
PHILIPS	PM3055	OSCILLOSCOPE SERVICE MANUAL	176	Y
PHILIPS	PM3065/3067	OSCILLOSCOPE SERVICE MANUAL	192	Y
PHILIPS	PM3200	OSCILLOSCOPE OPERATING & SERVICE MANUAL		
PHILIPS	PM3206	OSCILLOSCOPE OPERATING MANUAL	11	Y
PHILIPS	PM3207	OSCILLOSCOPE OPERATING MANUAL	8	Y
PHILIPS	PM3207	OSCILLOSCOPE SERVICE MANUAL	60	Y
PHILIPS	PM3211	OSCILLOSCOPE INSTRUCTION MANUAL - ENGLISH	60	Y
PHILIPS	PM3211	OSCILLOSCOPE INSTRUCTION MANUAL - MULTILINGUAL	96	Y
PHILIPS	PM3212	OSCILLOSCOPE INSTRUCTION MANUAL		
PHILIPS	PM3214	OSCILLOSCOPE INSTRUCTION MANUAL		
PHILIPS	PM3216	OSCILLOSCOPE INSTRUCTION MANUAL		
PHILIPS	PM3217	OSCILLOSCOPE OPERATING MANUAL	96	Y
PHILIPS	PM3218	OSCILLOSCOPE INSTRUCTION MANUAL		
PHILIPS	PM3219U	OSCILLOSCOPE OPERATING MANUAL	41	Y
PHILIPS	PM3219	OSCILLOSCOPE SERVICE MANUAL	171	Y
PHILIPS	PM3232	OSCILLOSCOPE INSTRUCTION MANUAL		
PHILIPS	PM3234	OSCILLOSCOPE INSTRUCTION MANUAL		
PHILIPS	PM3243	OSCILLOSCOPE INSTRUCTION MANUAL		
PHILIPS	PM3244	OSCILLOSCOPE INSTRUCTION MANUAL		
PHILIPS	PM3260	OSCILLOSCOPE OPERATING MANUAL		
PHILIPS	PM3260	OSCILLOSCOPE INSTRUCTION MANUAL	154	Y
PHILIPS	PM3262	OSCILLOSCOPE INSTRUCTION MANUAL	232	Y
PHILIPS	PM3265	OSCILLOSCOPE OPERATING & SERVICE MANUAL		
PHILIPS	PM3266	OSCILLOSCOPE OPERATING & SERVICE MANUAL		
PHILIPS	PM3267	BASIC PRINCIPLES OF OSCILLOSCOPES		
PHILIPS	PM3267	OSCILLOSCOPE SERVICE MANUAL	201	Y
PHILIPS	PM3305(U)	OSCILLOSCOPE SERVICE MANUAL	297	Y
PHILIPS	PM3310	OSCILLOSCOPE SERVICE MANUAL	345	Y
PHILIPS	PM3365A/67A/75/77	100 MHZ DIG. STORAGE SCOPE SERVICE MANUAL	417	Y
PHILIPS	PM6666	PROGRAMMABLE TIMER/COUNTER OPERATING MANUAL	54	Y
PHILIPS	PM6667/8	FREQUENCY COUNTER INSTRUCTION MANUAL		
PHILIPS	PM6673-PM6676	UNIVERSAL FREQUENCY COUNTER OPERATING MANUAL	16	Y
PHILIPS	PM6680	225MHZ TIMER/COUNTER OPERATING	240	Y
PHILIPS	PM6680	225MHZ TIMER/COUNTER PROGRAMMING	366	Y
PHILIPS	PM9010	100 MHZ SCOPE PROBE	14	Y

PHILIPS	PMR PUBLICATIONS	PMR PUBLICATIONS TECH DOC CATALOGUE	21	Y
PHILIPS	PR710	VHF/UHF TRANSCEIVER SERVICE MANUAL	100	Y
PHILIPS	PR710	ADVANCED DATA PROGRAMMER USER MANUAL	53	Y
PHILIPS	PR720	VHF TRUNKING PORTABLE SERVICE MANUAL	68	Y
PHILIPS	PR720	ADVANCED DATA PROGRAMMER USER MANUAL	30	Y
PHILIPS	PR720	STANDARD DATA PROGRAMMER USER MANUAL	41	Y
PHILIPS	PRF10 SERIES	VHF/UHF FM BASE STATION SERVICE MANUAL	254	Y
PHILIPS	PRF1050/1060	VHF/UHF FM BASE STATION SERVICE MANUAL	89	Y
PHILIPS	PRG1032	VHF ALPHANUMERIC PAGER	96	Y
PHILIPS	PRM8010/8020	VHF/UHF MOBILE TX/RX SERVICE MANUAL	220	Y
PHILIPS	PRM8060/8070	VHF/UHF MOBILE TX/RX SERVICE MANUAL	148	Y
PHILIPS	PRP73	VHF/UHF PORTABLE RADIO LEVEL 3 SERVICE MANUAL	177	Y
PHILIPS	PRP74	VHF/UHF PORTABLE RADIO LEVEL 3 SERVICE MANUAL	148	Y
PHILIPS	PRP76	VHF/UHF PORTABLE RADIO LEVEL 3 SERVICE MANUAL	158	Y
PHILIPS	PRX10	POWER SUPPLY LEVEL 1 AND 2 SERVICE MANUAL	8	Y
PHILIPS	PRX10/PRX20	POWER SUPPLY UNITS SERVICE MANUAL	13	Y
PLESSEY	PRD 1100 MK II	RADIO RELAY EQUIPMENT SERVICE MANUAL	77	Y
PLESSEY	PRD 1100 MK II	RADIO RELAY (930-470MHz) SERVICE MANUAL VOLUME 2		
PLESSEY	PR2250	RECEIVER TECHNICAL MANUAL PART 1	41	Y
PLESSEY	PR2250	RECEIVER TECHNICAL MANUAL PART 2	44	Y
PLESSEY	RT320	HF RADIO SERVICE MANUAL VOLUME 2		
PMI	1018B	LOG/LIN RF PEAK POWER METER INSTRUCTION MANUAL	120	Y
PMI	1038-V13	VERTICAL LOG AMP PLUG-IN INSTRUCTION MANUAL		
PMI	1045	RF POWER METER INSTRUCTION MANUAL		
POCOM	AFR-1000	OPERATING MANUAL	23	Y
POLAR	700	TONEOHM OPERATING MANUAL	16	Y
POLAR	B2000	MICROPROCESSOR SYSTEM TESTER	30	Y
POLAR	T2500/T3000	OPERATOR MANUAL		
POLARAD	630A,631A,640A,641A	MICROWAVE SPECTRUM ANALYZER	334	Y
POLARAD	1605B-T	MICROWAVE SIG GEN INSTRUCTION MANUAL		
POLARAD	SA-84W	OPERATING & MAINTENANCE INSTRUCTIONS		
PSION	WORKABOUT	USER GUIDE	322	Y
PYE	A100	1KW VHF LINEAR AMPLIFIER CIRCUIT DIAGRAM	5	Y
PYE	AC200PU	POWER SUPPLY OPERATING & SERVICE MANUAL		
PYE	AC25PU	POWER SUPPLY SERVICE MANUAL	7	Y
PYE	AC90PU	POWER SUPPLY SERVICE MANUAL	23	Y
PYE	ATU4	ATU SERVICE MANUAL	12	Y
PYE	BC23	AUTOMATIC BATTERY CHARGER SERVICE MANUAL	11	Y
PYE	BC24	AUTOMATIC BATTERY CHARGER SERVICE MANUAL	15	Y
PYE	DESK MICROPHONE	SERVICE MANUAL	10	Y
PYE	F9U	UHF FIXED STATION SERVICE MANUAL		
PYE	HS400	HIGH STABILITY DRIVE UNIT	9	Y
PYE	L300	RADIO LINK PART 1 SERVICE MANUAL		
PYE	M256AB	BEAVER VHF FM SUPPLEMENT TO SERVICE MANUAL	26	Y
PYE	M293	VHF AM MOBILE SERVICE MANUAL	63	Y
PYE	MF25FM	EUROPA VHF FM MOBILE SERVICE SHEET	12	Y
PYE	MF25PU	CONVERTER UNIT	6	Y
PYE	MM1	MODULATION METER OPER & SERVICE INSTRUCTIONS	29	Y
PYE	MX290	40/80 CHANNEL SUPPLEMENT	13	Y
PYE	MX293	VHF AM MOBILE SERVICE MANUAL	68	Y
PYE	MX294	VHF FM MOBILE SERVICE MANUAL	137	Y
PYE	ON-FREQ RPTR	UHF ON-FREQUENCY REPEATER SERVICE MANUAL	82	Y
PYE	P5001	POCKETFONE VHF AM TRANSCEIVER SERVICE MANUAL	76	Y
PYE	PF2FMB	POCKETFONE 70 SERVICE SHEET	16	Y
PYE	PF85	SERVICE MANUAL	106	Y
PYE	PF85 (C)	INTRINSICALLY SAFE SUPPLEMENT	38	Y
PYE	PF85/PFX	VEHICLE ADAPTOR KIT SERVICE MANUAL	21	Y
PYE	PFX	POCKETFONE VHF/UHF FM TRANSCEIVER SERVICE MANUAL	146	Y
PYE	PFX	SUPPLEMENT TO SERVICE MANUAL	51	Y
PYE	PT506	MARKER OSCILLATOR INSTRUCTION CARD	4	Y
PYE	PT507/PT508	MARKER OSCILLATOR INSTRUCTION CARD	4	Y
PYE	PTC113	VHF RADIOTELEPHONE TECHNICAL INSTRUCTIONS	27	Y
PYE	PYECALL	UHF SELECTIVE CALLING SYSTEM	22	Y
PYE	S2P	MOBILE SCRAMBLER SERVICE MANUAL	27	Y
PYE	SG1/U	UHF SIG GEN OPERATING & SERVICE INSTRUCTIONS	8	Y
PYE	SG3V	VHF SIG GEN OPERATING & SERVICE INSTRUCTIONS	13	Y
PYE	SG5U	UHF SIG GEN OPERATING & SERVICE INSTRUCTIONS	11	Y
PYE	SSB130 M/F	SSB HF RADIOTELEPHONE SERVICE MANUAL	100	Y
PYE	SSB1000T	SSB HF TRANSMITTER SERVICE MANUAL	75	Y
PYE	SSB TELERADIO	SSB TELERADIO UNIT SERVICE MANUAL	21	Y
PYE	T406	VHF FM FIXED STATION TRANSMITTER SERVICE MANUAL	93	Y
PYE	TM3	IF SIGNAL GENERATOR OPERATING & SERVICE	6	Y
PYE	TM4	TEST METER	6	Y
PYE	W15AM	VHF AM MOBILE SERVICE MANUAL	74	Y
QUARTZLOCK	2A-01	OFF AIR FREQUENCY STANDARD MANUAL	16	Y
QUARTZLOCK	10A-01	RUBIDIUM FREQUENCY STANDARD INSTRUCTION MANUAL	37	Y
RACAL	835	COUNTER/TIMER TECHNICAL MANUAL	92	Y
RACAL	836	COUNTER TECHNICAL MANUAL	39	Y
RACAL	852	VHF/UHF CALIBRATOR TECHNICAL MANUAL	54	Y
RACAL	1991,1992	FREQUENCY COUNTER INSTRUCTION MANUAL	240	Y
RACAL	1998,1999	FREQUENCY COUNTER OPERATORS MANUAL	72	Y

RACAL	1998.1999	FREQUENCY COUNTER SERVICE MANUAL	253	Y
RACAL	2101	MICROWAVE COUNTER OPERATORS MANUAL	91	Y
RACAL	2201	FREQUENCY COUNTER USER MANUAL	128	Y
RACAL	2251A	FREQUENCY COUNTER OPERATORS MANUAL	108	Y
RACAL	2461C	FREQUENCY COUNTER OPERATORS MANUAL	150	Y
RACAL	4152A	DIGITAL MULTIMETER INSTRUCTION MANUAL	202	Y
RACAL	6103B	DIGITAL RADIO TEST SET OPERATING MANUAL	224	Y
RACAL	9008	AUTO MOD METER OPERATORS HANDBOOK	16	Y
RACAL	9008	AUTO MOD METER MAINTENANCE MANUAL	95	Y
RACAL	9009	AUTO MOD METER OPERATORS HANDBOOK	24	Y
RACAL	9009	AUTO MOD METER MAINTENANCE MANUAL	87	Y
RACAL	9024	FREQUENCY-PERIOD METER TECHNICAL MANUAL	106	Y
RACAL	9036	COUNTER TECHNICAL MANUAL	39	Y
RACAL	9037	COUNTER TECHNICAL MANUAL	39	Y
RACAL	9038	COUNTER TECHNICAL MANUAL	39	Y
RACAL	9081/9082	SIG. GEN. MAINTENANCE MANUAL	138	Y
RACAL	9084	SIG. GEN. MAINTENANCE MANUAL	338	Y
RACAL	9087	SYNTHESIZED SIG GEN OPERATORS MANUAL		
RACAL	9087	SYNTHESIZED SIG GEN MAINTENANCE MANUAL	342	Y
RACAL	9100	POWER METER OPERATING/MAINTENANCE MANUAL	2	Y
RACAL	9104	RF POWER METER TECHNICAL MANUAL	42	Y
RACAL	9105	RF MICROWATTMETER MAINTENANCE MANUAL	80	Y
RACAL	9215	PROGRAMMABLE POWER SUPPLY USER MANUAL	52	Y
RACAL	9303	TRUE RMS RF LEVEL METER OPERATING MANUAL	62	Y
RACAL	9303	TRUE RMS RF LEVEL METER MAINTENANCE MANUAL	218	Y
RACAL	9475	RUBIDIUM FREQUENCY STANDARD INSTRUCTION MANUAL	35	Y
RACAL	9841	3GHZ FREQUENCY METER OPERATORS MANUAL	15	Y
RACAL	9900	UNIVERSAL COUNTER-TIMER OPERATING & SERVICE		
RACAL	9904	UNIVERSAL COUNTER-TIMER OPERATING	22	Y
RACAL	9904	UNIVERSAL COUNTER-TIMER MAINTENANCE	106	Y
RACAL	9905	UNIVERSAL COUNTER OPERATING & SERVICE MANUAL		
RACAL	9911.9913	VHF FREQUENCY METERS OPERATORS HANDBOOK	19	Y
RACAL	9915	FREQUENCY COUNTER OPERATORS HANDBOOK	28	Y
RACAL	9915	FREQUENCY COUNTER OP & MAINT MANUAL	87	Y
RACAL	9916	FREQUENCY COUNTER OPERATORS HANDBOOK	33	Y
RACAL	9917	UHF COUNTER TECHNICAL MANUAL	28	Y
RACAL	9301A	MILLIVOLTMETER OPERATING & MAINTENANCE MANUAL	71	Y
RACAL	BCC66HP	JAGUAR MANPACK RADIO USER HANDBOOK	91	Y
RACAL	LW8KM/LW8AM	TACTICAL DIPOLE USER MANUAL	22	Y
RACAL	MA168B	DUAL DIVERSITY SWITCHING UNIT	63	Y
RACAL	MA987C/D	AUDIO AMPLIFIER UNIT TECHNICAL MANUAL	30	Y
RACAL	MA2731	BULK ENCRYPTION UNIT FIELD WORKSHOP REPAIR MANUAL	53	Y
RACAL	MA4009	REBROADCAST CONTROL UNIT TECHNICAL MANUAL	37	Y
RACAL	MA4010	RECORDER UNIT - PART MANUAL	43	Y
RACAL	MA4014B	ENCRYPTION UNIT TECHNICAL MANUAL	154	Y
RACAL	MA4015	32 WAY HF FILTER UNIT TECHNICAL MANUAL	60	Y
RACAL	MA4085	AUDIO AMPLIFIER & AC POWER UNIT TECHNICAL MANUAL	27	Y
RACAL	MA4177,MA4178	AC POWER UNIT TECHNICAL MANUAL	51	Y
RACAL	MA4223	LINE ADAPTOR UNIT (USED WITH MA4224) TECHNICAL		
RACAL	MA4224	AUDIO ENCRYPTION UNIT TECHNICAL MANUAL	194	Y
RACAL	MA4225	MINIATURE ENCRYPTION UNIT TECHNICAL MANUAL		
RACAL	MA4226/MA4298/MA4223	SECURE TELEPHONE SYSTEM TECHNICAL MANUAL	129	Y
RACAL	MA4227	PORTABLE TELEPHONE ENCRYPTION UNIT TECHNICAL MAN	88	Y
RACAL	MA4230	MORSE ENCODER TECHNICAL MANUAL	25	Y
RACAL	MA4230/MA4231 CONV.	MA4230/4231 CONVERSION NOTES	7	Y
RACAL	MA4231	MORSE RECEIVER TECHNICAL MANUAL	47	Y
RACAL	MA4235	MORSE SYSTEM LINE ADAPTER	7	Y
RACAL	MA4248	MEROD TECHNICAL MANUAL	161	Y
RACAL	MA4254/MA4255	MASTER KEYFILL TECHNICAL MANUAL	134	Y
RACAL	MA4258B	VOICE SCRAMBLER TECHNICAL MANUAL	91	Y
RACAL	MA4400	SECURE TELEPHONE TECHNICAL MANUAL	138	Y
RACAL	MA4414	AUDIO ENCRYPTION UNIT (SUPPLEMENT TO MA4224) TECH.	39	Y
RACAL	MA4463	DIGITAL VOICE ENCRYPTION UNIT TECHNICAL MANUAL	122	Y
RACAL	MA4470	AUDIO ENCRYPTION UNIT MAINTENANCE MANUAL	83	Y
RACAL	MA4777/A/B/C	DIGITAL ENCRYPTION UNIT TECHNICAL MANUAL	165	Y
RACAL	MA79	DRIVE UNIT TECHNICAL MANUAL	151	Y
RACAL	PRM4021ED	HF TRANSCEIVER USER HANDBOOK	53	Y
RACAL	PRM4735HA	COVERT VHF TRANSCEIVER TECHNICAL MANUAL	245	Y
RACAL	RA117	HF RX TECHNICAL MANUAL	139	Y
RACAL	RA17	RX TECHNICAL MANUAL	70	Y
RACAL	RA17L	RX OPERATING & TECHNICAL MANUAL	87	Y
RACAL	RA1792	HF RECEIVER OPERATING MANUAL	61	Y
RACAL	RA1792	HF RECEIVER MAINTENANCE MANUAL	473	Y
RACAL	RA2091	RX TECHNICAL MANUAL	111	Y
RACAL	RA329B	HF RX SYSTEM MAINTENANCE MANUAL	294	Y
RACAL	RA6790	RX TECHNICAL MANUAL (PART)		Y
RACAL	RA98	ISB ADAPTOR TECHNICAL MANUAL	93	Y
RACAL	TA940B	100 WATT LINEAR AMPLIFIER TECHNICAL MANUAL	48	Y
RACAL	TA1823	AUTO-TUNED HF LINEAR AMPLIFIER TECHNICAL MANUAL	206	Y
RACAL	TRA906	HF SSB TRANSMITTER-RECEIVER TECHNICAL MANUAL	82	Y
RACAL	TRA921	HF SSB MANPACK TECHNICAL MANUAL	144	Y

RACAL	TRA922	HF SSB MANPACK TECHNICAL MANUAL	63	Y
RACAL	TRA931XH	TX/RX TECHNICAL MANUAL	298	Y
RACAL	TRA967	VHF TX/RX TECHNICAL MANUAL (SOME PAGES MISSING)	190	Y
RACAL	TRA3755/3756	HF TRANSCEIVER TECHNICAL MANUAL	496	Y
RADIOMETER	AFM1b	MODULATION METER INSTRUCTION MANUAL	38	Y
RADIOMETER	RV36	AF MILLIVOLTMETER INSTRUCTION MANUAL	12	Y
RADIOMETER	RV36c	AF MILLIVOLTMETER INSTRUCTION MANUAL	12	Y
RANGER	SRA-2300	AUTO ATU SERVICE MANUAL	15	Y
RCA	AR-88LF	HF RECEIVER INSTRUCTIONS	31	Y
RCA	CRUISEPHONE 25	25 WATT RADIOTELEPHONE INSTRUCTION BOOK	29	Y
RE	AFM2	MODULATION METER		
REALISTIC	HTX-202	SERVICE MANUAL	70	Y
REDIFON	PT2100	VHF PAGING TX	117	Y
RM	KL-203	LINEAR AMPLIFIER	2	Y
ROBAND	33-10	VARIABLE PSU SERVICE MANUAL	7	Y
ROBAND	60-5	VAREX TWIN PSU SERVICE MANUAL	32	Y
ROBOT	70	SLOW SCAN TV MONITOR INSTRUCTION BOOK	21	Y
ROBOT	80	SLOW SCAN TV CAMERA INSTRUCTION BOOK	28	Y
ROBOT	1200C	COLOR SCAN CONVERTER INSTRUCTION BOOK	81	Y
ROHDE&SCHWARZ	CMD54/57	DIGITAL RADIOCOMMUNICATION TESTER OPERATING		
ROHDE&SCHWARZ	FSIQ	SIGNAL ANALYZER OPERATING MANUAL		
ROHDE&SCHWARZ	FSIQ	SIGNAL ANALYZER SERVICE MANUAL		
ROHDE&SCHWARZ	FSP3/7	SPECTRUM ANALYZER SERVICE MANUAL INSTRUMENT		
ROHDE&SCHWARZ	NAP	POWER REFLECTION METER OPERATING & SERVICE	144	Y
ROHDE&SCHWARZ	NGPV	POWER SUPPLY (GERMAN)		
ROHDE&SCHWARZ	NRT	POWER REFLECTION METER OPERATING MANUAL		
ROHDE&SCHWARZ	SMFP	MOBILE TESTER SERVICE MANUAL VOLUME 2		
ROHDE&SCHWARZ	SML01	SIGNAL GENERATOR OPERATING MANUAL	208	Y
ROHDE&SCHWARZ	SWOB5	POLYSKOP SERVICE MANUAL	600	Y
ROHDE&SCHWARZ	UPV/UPV66	AUDIO ANALYZER DC-250KHZ OPERATING MANUAL	852	Y
ROHDE&SCHWARZ	URV5	MILLIVOLTMETER BROCHURE	8	Y
ROHDE&SCHWARZ	USVD	UHF TEST RECEIVER OPERATING & SERVICE MANUAL		
SAYROSA	252	AUTOMATIC MODULATION METER	56	Y
SCHLUMBERGER	1510	SPECTRUM ANALYSER OPERATING MANUAL	58	Y
SCHLUMBERGER	1510	SPEC ANALYSER INSTRUCTION/MAINTENANCE MANUAL	349	Y
SCHLUMBERGER	4022	STABILOCK COMMS TEST SET OPERATING MANUAL	67	Y
SCHLUMBERGER	4031	COMMS TEST SET OPERATING MANUAL	331	Y
SCHLUMBERGER	4031	COMMS TEST SET SERVICE MANUAL VOLUME 1	369	Y
SCHLUMBERGER	4031	COMMS TEST SET SERVICE MANUAL VOLUME 2	443	Y
SCHLUMBERGER	4032	COMMS TEST SET GETTING STARTED	60	Y
SCHLUMBERGER	4032	COMMS TEST SET OPERATING INSTRUCTIONS	382	Y
SCHLUMBERGER	4922	RADIO CODE ANALYSER OPERATING MANUAL	125	Y
SCIENTIFIC-ATLANTA	1710	MICROWAVE RECEIVER INSTRUCTION MANUAL	138	Y
SCIENTIFIC-ATLANTA	6611	KU-BAND VIDEO RECEIVER INSTALL & OPERATION	36	Y
SCIENTIFIC-ATLANTA	1871A	DIGITAL FREQUENCY DISPLAY INSTRUCTION MANUAL		
SCS	PTC PLUS	FACTOR CONTROLLER USER MANUAL	34	Y
SEAFARER	SEAVOICE RT550	VHF MARINE OPERATING & MAINT HANDBOOK	54	Y
SEAFARER	SEAVOICE RT680	VHF MARINE OPER & MAINT HANDBOOK	56	Y
SEAWARD	PAT1000	PORTABLE APPLIANCE TESTER OPERATING INSTRUCTIONS	18	Y
SEAWARD	PAT2000	PORTABLE APPLIANCE TESTER OPERATING INSTRUCTIONS	20	Y
SEI	SELECTEST SUPER50	MULTIMETER INSTRUCTION MANUAL	8	Y
SEIKI	CENTURY-21D	COMMS RECEIVER USER MANUAL	8	Y
SIMOCO	PUBLICATIONS CAT	PUBLICATIONS CATALOGUE TECHNICAL DOCUMENTATION	13	Y
SKANTI	R5001	RECEIVER TECHNICAL MANUAL		Y
SKANTI	8750	ATU	24	Y
SMALL SYSTEMS ENG	B300	BIDIRECTIONAL INTERFACE OPERATING	14	Y
SMALL SYSTEMS ENG	LONDON 12	PABX PROGRAMMING GUIDE	22	Y
SMC	2515/L8	VHF MOBILE SERVICE MANUAL	85	Y
SMC	2520	BAND III MOBILE SERVICE MANUAL	89	Y
SMC	HF-90	COMPACT TRANSCEIVER TECHNICAL MANUAL		
SMC	MONITORSCOPE	INSTRUCTION MANUAL	16	Y
SOLARTRON	7150	DIGITAL MULTIMETER OPERATINGMANUAL	102	Y
SOLARTRON	7150	DIGITAL MULTIMETER MAINTENANCE MANUAL	84	Y
SOLARTRON	7151	COMPUTING MULTIMETER OPERATING MANUAL	102	Y
SOMMERKAMP	FL-200B	SSB TX OPERATING MANUAL		
SOMMERKAMP	FR-100B	COMMUNICATIONS RECEIVER OPERATING MANUAL		
SONY	AIR-7	RX OPERATING INSTRUCTIONS	13	Y
SONY	GDM-2036S	MULTISCAN COLOUR MONITOR 20 INCH	186	Y
SONY	ICF-2001D	PLL SYNTHESIZED RECEIVER OPERATING INSTRUCTIONS	21	Y
SONY	ICF-2001D	PLL SYNTHESIZED RECEIVER SERVICE MANUAL	85	Y
SONY	ICF-7600D	PLL SYNTHESIZED RECEIVER OPERATING INSTRUCTIONS	14	Y
SONY	ICF-SW55	PLL SYNTHESIZED RECEIVER SERVICE MANUAL	69	Y
SONY	IC-SW1	PLL SYNTHESIZED RECEIVER SERVICE MANUAL	39	Y
SORENSEN	DCR-B	500W POWER SUPPLY INSTRUCTION MANUAL		
SPECTRUM	SCR1000	VHF FM REPEATER OPERATIONS & MAINTENANCE	57	Y
SR	SR-206/210	HF SSB TRANSCEIVER OPERATING & MAINTENANCE		
SR	SR-240	HF SSB TRANSCEIVER OPERATING & MAINTENANCE		
SR	SR-604	HF ANTENNA COUPLER OPERATING & MAINTENANCE		
SRS	SR785	DYNAMIC SIGNAL ANALYZER OPERATING & PROGRAMMING	560	Y
SRS	SR785	DYNAMIC SIGNAL ANALYZER SERVICE GUIDE	125	Y
SSM	EUROPA	VHF TRANSVERTER	8	Y

STAG	PP28	OPERATING MANUAL	31	Y
STAG	PP29	OPERATING MANUAL	9	Y
STAG	PP39	OPERATING MANUAL	144	Y
STANDARD	C7800	UHF MOBILE TX/RX INSTRUCTIONS MANUAL (NO SCHEMATICS)	46	Y
STANDARD	C867	VHF FM SERVICE MANUAL		
STANDARD	CPB78	UHF FM POWER BOOSTER INSTRUCTION MANUAL	16	Y
STC	74600	ATTENUATOR		
STORNO	CQM 633X	FM MOBILE TECHNICAL MANUAL	219	Y
SWAN	700-CX	HF TRANSCEIVER OPERATION AND MAINTENANCE	36	Y
SYMEK	TNC2H	TNC	28	Y
SYSTRON-DONNER	1702	SIGNAL GENERATOR OPERATING & SERVICE MANUAL	331	Y
SYSTRON-DONNER	6053	FREQUENCY COUNTER INSTRUCTION MANUAL	92	Y
SYSTRON-DONNER	6020/6030	FREQUENCY COUNTER SERVICE MANUAL	332	Y
SYSTRON-DONNER	604xA	FREQUENCY COUNTER OPERATING & SERVICE MANUAL		
SYSTRON-DONNER	6054B	FREQUENCY COUNTER (PART - NO SCHEMATICS)	92	Y
SYSTRON-DONNER	6054B	FREQUENCY COUNTER INSTRUCTION MANUAL		
SYSTRON-DONNER	6316A/B	FREQUENCY COUNTER INSTRUCTION MANUAL	164	Y
SYSTRON-DONNER	6400/6500	FREQUENCY COUNTER SERVICE MANUAL		
SYSTRON-DONNER	7344A	DIGITAL MULTIMETER OPERATING & SERVICE MANUAL		
SYSTRON-DONNER	P1 & P2	PROGRAMMER OPERATING & SERVICE MANUAL		
TAIT	T2000	FM MOBILE SERVICE MANUAL	404	Y
TAIT	T750	UHF FM MOBILE SERVICE MANUAL	142	Y
TAIT	T801	FREQUENCY REFERENCE MODULE OPERATOR'S MANUAL	23	Y
TAIT	T801	FREQUENCY REFERENCE MODULE SERVICE MANUAL		
TAKEDA RIKEN	TR4132	SPECTRUM ANALYSER OPER & MAINT MANUAL	232	Y
TALCO	ER08	VHF FM MOBILE SERVICE MANUAL	35	Y
TCL	962	UHF MOBILE DUPLEXER	14	Y
TEKTRONIX	130	L-C METER INSTRUCTION MANUAL	65	Y
TEKTRONIX	134	CURRENT PROBE AMPLIFIER INSTRUCTION MANUAL		
TEKTRONIX	308	DATA ANALYZER SERVICE		
TEKTRONIX	422	OSCILLOSCOPE INSTRUCTION MANUAL	201	Y
TEKTRONIX	491	SPECTRUM ANALYSER OPERATING & SERVICE MANUAL		
TEKTRONIX	549	STORAGE OSCILLOSCOPE INSTRUCTION MANUAL		
TEKTRONIX	551	OSCILLOSCOPE INSTRUCTION MANUAL		
TEKTRONIX	564	OSCILLOSCOPE INSTRUCTION MANUAL		
TEKTRONIX	601	STORAGE MONITOR OPERATING & SERVICE		
TEKTRONIX	603.604	MONITOR INSTRUCTION MANUAL		
TEKTRONIX	607	MONITOR INSTRUCTION MANUAL		
TEKTRONIX	611	STORAGE DISPLAY UNIT INSTRUCTION MANUAL		
TEKTRONIX	661	OSCILLOSCOPE INSTRUCTION MANUAL		
TEKTRONIX	7A26	DUAL TRACE AMPLIFIER	94	Y
TEKTRONIX	1241	LOGIC ANALYZER SERVICE MANUAL ADDENDUM	244	Y
TEKTRONIX	1730	WAVEFORM MONITOR OPERATING & SERVICE MANUAL		
TEKTRONIX	2215	OSCILLOSCOPE SERVICE MANUAL		
TEKTRONIX	2221A	DIGITAL STORAGE SCOPE USER MANUAL	164	Y
TEKTRONIX	2225	OSCILLOSCOPE SERVICE MANUAL	208	Y
TEKTRONIX	2235	OSCILLOSCOPE SERVICE MANUAL		
TEKTRONIX	2246	OSCILLOSCOPE OPERATORS MANUAL	97	Y
TEKTRONIX	2247A	OSCILLOSCOPE SERVICE MANUAL	370	Y
TEKTRONIX	2335	OSCILLOSCOPE SERVICE MANUAL		
TEKTRONIX	2336 YA	OSCILLOSCOPE OPERATORS MANUAL		
TEKTRONIX	2336 YA	OSCILLOSCOPE SERVICE MANUAL		
TEKTRONIX	2430	OSCILLOSCOPE SERVICE MANUAL	518	Y
TEKTRONIX	2430A	OSCILLOSCOPE OPERATORS MANUAL	416	Y
TEKTRONIX	2430A	OSCILLOSCOPE PROGRAMMERS REFERENCE GUIDE	159	Y
TEKTRONIX	2430A	OSCILLOSCOPE USER REFERENCE GUIDE	49	Y
TEKTRONIX	2440	OSCILLOSCOPE SERVICE MANUAL	225	Y
TEKTRONIX	2445	OSCILLOSCOPE SERVICE MANUAL	323	Y
TEKTRONIX	2465	OSCILLOSCOPE OPERATORS MANUAL	52	Y
TEKTRONIX	2465	OSCILLOSCOPE INSTRUCTION MANUAL	47	Y
TEKTRONIX	2465	OSCILLOSCOPE SERVICE MANUAL	360	Y
TEKTRONIX	2465A.2455A.2445A	OSCILLOSCOPE OPERATORS MANUAL	161	Y
TEKTRONIX	2465B.2455B.2445B	OSCILLOSCOPE OPERATORS MANUAL		
TEKTRONIX	2465B/2467B	OSCILLOSCOPE SERVICE MANUAL (UP TO SECTION 7)	252	Y
TEKTRONIX	24x5A.2467	OPTION 10 INTERFACING GUIDE	150	Y
TEKTRONIX	2467B	OSCILLOSCOPE & OPTIONS OPERATOR MANUAL	129	Y
TEKTRONIX	2707	EXTERNAL TRACKING GENERATOR INSTRUCTION MANUAL	178	Y
TEKTRONIX	2711.2712	SPECTRUM ANALYSER SERVICE MANUAL	669	Y
TEKTRONIX	2712	SPECTRUM ANALYSER OPERATING	292	Y
TEKTRONIX	2711,2712	SPECTRUM ANALYSER PROGRAMMING	276	Y
TEKTRONIX	2714,2715	SPECTRUM ANALYSER PROGRAMMING	295	Y
TEKTRONIX	2714,2715	SPECTRUM ANALYSER REFERENCE	40	Y
TEKTRONIX	2714	SPECTRUM ANALYSER USER MANUAL	357	Y
TEKTRONIX	2715	SPECTRUM ANALYSER USER MANUAL	347	Y
TEKTRONIX	2782	INSTALL/PERFORMANCE VERIFICATION	123	Y
TEKTRONIX	2782	SPECTRUM ANALYSER OPERATORS MANUAL	249	Y
TEKTRONIX	2782	SPECTRUM ANALYSER OPERATORS HANDBOOK	129	Y
TEKTRONIX	2782	SPECTRUM ANALYZER PROGRAMMING MANUAL	316	Y
TEKTRONIX	7603	OSCILLOSCOPE OPERATING & SERVICE MANUAL		
TEKTRONIX	321A	OSCILLOSCOPE INSTRUCTION MANUAL		
TEKTRONIX	453	OSCILLOSCOPE ARMY TECNICAL MANUAL	259	Y

TEKTRONIX	465B	OSCILLOSCOPE		Y
TEKTRONIX	475, DM44	OSCILLOSCOPE OPERATORS MANUAL	76	Y
TEKTRONIX	475A	OSCILLOSCOPE OPERATORS MANUAL		
TEKTRONIX	475A	OSCILLOSCOPE SERVICE MANUAL		
TEKTRONIX	485 / R485	OSCILLOSCOPE SERVICE MANUAL		
TEKTRONIX	492 P	SPECTRUM ANALYSER OPERATING	77	Y
TEKTRONIX	492 P	SPECTRUM ANALYSER SERVICE VOL 1	303	Y
TEKTRONIX	492 P	SPECTRUM ANALYSER SERVICE VOL 2	494	Y
TEKTRONIX	494/494P	SPECTRUM ANALYSER OPERATING	84	Y
TEKTRONIX	494/494P	SPECTRUM ANALYSER SERVICE VOL 1	328	Y
TEKTRONIX	494/494P	SPECTRUM ANALYSER SERVICE VOL 2	276	Y
TEKTRONIX	494AP	SPECTRUM ANALYSER PROGRAMMING	180	Y
TEKTRONIX	495P	SPECTRUM ANALYSER USER MANUAL	149	Y
TEKTRONIX	496/496P	SPECTRUM ANALYSER OPERATORS HANDBOOK	34	Y
TEKTRONIX	496/496P	SPECTRUM ANALYSER SERVICE VOL 1	251	Y
TEKTRONIX	496/496P	SPECTRUM ANALYSER SERVICE VOL 2	367	Y
TEKTRONIX	545A	OSCILLOSCOPE INSTRUCTION MANUAL		
TEKTRONIX	603 A	MONITOR OPERATING & SERVICE MANUAL		
TEKTRONIX	604 A	MONITOR INSTRUCTION MANUAL	140	Y
TEKTRONIX	7603	OSCILLOSCOPE SERVICE MANUAL	211	Y
TEKTRONIX	7A13	DIFFERENTIAL COMPARATOR INSTRUCTION MANUAL	132	Y
TEKTRONIX	7A18	DUAL TRACE AMPLIFIER OPERATING & SERVICE MANUAL		
TEKTRONIX	7B53A	DUAL TIMEBASE PLUG-IN OPERATING & SERVICE MANUAL		
TEKTRONIX	7D01	LOGIC ANALYSER OPERATING & SERVICE MANUAL		
TEKTRONIX	7854	OSCILLOSCOPE OPERATORS MANUAL	434	Y
TEKTRONIX	A6302	20AMP AC/DC CURRENT PROBE USER MANUAL	34	Y
TEKTRONIX	A6303	100AMP AC/DC CURRENT PROBE USER MANUAL	26	Y
TEKTRONIX	CA	PLUG-IN UNIT		
TEKTRONIX	CT-6	AC CURRENT PROBE USER MANUAL	46	Y
TEKTRONIX	D	PLUG-IN UNIT		
TEKTRONIX	D10	SINGLE BEAM DISPLAY UNIT INSTRUCTION MANUAL		
TEKTRONIX	DC503	ADJUSTMENT & SCHEMATIC	28	Y
TEKTRONIX	DD501	DIGITAL DELAY INSTRUCTION MANUAL	86	Y
TEKTRONIX	FG501A	FUNCTION GENERATOR INSTRUCTION MANUAL	58	Y
TEKTRONIX	FG502	FUNCTION GENERATOR INSTRUCTION MANUAL		
TEKTRONIX	M	PLUG-IN UNIT		
TEKTRONIX	P2100	PROBE USER MANUAL	12	Y
TEKTRONIX	P2200	PROBE USER MANUAL	14	Y
TEKTRONIX	P3010	PROBE USER MANUAL	19	Y
TEKTRONIX	P5050	PROBE USER MANUAL	20	Y
TEKTRONIX	P5100	PROBE USER MANUAL	40	Y
TEKTRONIX	P5102	PROBE USER MANUAL	31	Y
TEKTRONIX	P5200	PROBE USER MANUAL	46	Y
TEKTRONIX	P5205	PROBE USER MANUAL	54	Y
TEKTRONIX	P5210	PROBE USER MANUAL	152	Y
TEKTRONIX	P5210	PROBE SERVICE MANUAL	46	Y
TEKTRONIX	P6006	PROBE OPERATING MANUAL		
TEKTRONIX	P6009	PROBE USER MANUAL	16	Y
TEKTRONIX	P6010	PROBE INSTRUCTION MANUAL	20	Y
TEKTRONIX	P6011	PROBE INSTRUCTION MANUAL	9	Y
TEKTRONIX	P6015A	1000X PROBE USER MANUAL	76	Y
TEKTRONIX	P6016	CURRENT PROBE OPERATING & SERVICE MANUAL		
TEKTRONIX	P6021	CURRENT PROBE USER MANUAL	56	Y
TEKTRONIX	P6022	CURRENT PROBE USER MANUAL	48	Y
TEKTRONIX	P6047	PROBE INSTRUCTION MANUAL	19	Y
TEKTRONIX	P6101B	PROBE USER MANUAL	13	Y
TEKTRONIX	P6103B	PROBE USER MANUAL	17	Y
TEKTRONIX	P6105A	PROBE USER MANUAL	40	Y
TEKTRONIX	P6106A	PROBE USER MANUAL	20	Y
TEKTRONIX	P6109B	PROBE USER MANUAL	17	Y
TEKTRONIX	P6111B	200MHZ 10X PASSIVE PROBE	12	Y
TEKTRONIX	P6112	PROBE USER MANUAL	15	Y
TEKTRONIX	P6114B	PROBE USER MANUAL	17	Y
TEKTRONIX	P6117	PROBE USER MANUAL	14	Y
TEKTRONIX	P6119B	PROBE USER MANUAL	16	Y
TEKTRONIX	P6122	PROBE INSTRUCTION MANUAL	32	Y
TEKTRONIX	P6129B	PROBE USER MANUAL	15	Y
TEKTRONIX	P6131	PROBE USER MANUAL	28	Y
TEKTRONIX	P6133	PROBE USER MANUAL	11	Y
TEKTRONIX	P6134C	PROBE USER MANUAL	9	Y
TEKTRONIX	P6135A	PROBE USER MANUAL	74	Y
TEKTRONIX	P6136	PROBE USER MANUAL	30	Y
TEKTRONIX	P6137	PROBE USER MANUAL	20	Y
TEKTRONIX	P6138A	PROBE USER MANUAL	16	Y
TEKTRONIX	P6139A	PROBE USER MANUAL	16	Y
TEKTRONIX	P6150	PROBE USER MANUAL	14	Y
TEKTRONIX	P6156	PROBE USER MANUAL	14	Y
TEKTRONIX	P6158	PROBE USER MANUAL	16	Y
TEKTRONIX	P6201	900MHZ FET PROBE INSTRUCTION MANUAL	49	Y
TEKTRONIX	P6202A	500MHZ FET PROBE USER MANUAL	108	Y
TEKTRONIX	P6204	FET PROBE USER MANUAL	69	Y

TEKTRONIX	P6205	FET PROBE USER MANUAL	65	Y
TEKTRONIX	P6207	FET PROBE USER MANUAL	84	Y
TEKTRONIX	P6209	FET PROBE USER MANUAL	76	Y
TEKTRONIX	P6217	FET PROBE USER MANUAL	84	Y
TEKTRONIX	P6243	PROBE USER MANUAL	30	Y
TEKTRONIX	P6245AD	PROBE USER MANUAL	78	Y
TEKTRONIX	P6246	PROBE USER MANUAL	34	Y
TEKTRONIX	P6246	PROBE SERVICE MANUAL	54	Y
TEKTRONIX	P6248	PROBE USER MANUAL	38	Y
TEKTRONIX	P6249	PROBE USER MANUAL	80	Y
TEKTRONIX	P6330	PROBE USER MANUAL	86	Y
TEKTRONIX	P6339A	PROBE USER MANUAL	54	Y
TEKTRONIX	P6434	PROBE USER MANUAL	48	Y
TEKTRONIX	P6451	DATA ACQUISITION PROBE INSTRUCTIONS		
TEKTRONIX	P6467	HIGH SPEED PROBE ADAPTER USER MANUAL	83	Y
TEKTRONIX	P6561A	PROBE USER MANUAL	16	Y
TEKTRONIX	P6562A	PROBE USER MANUAL	16	Y
TEKTRONIX	P6563A	PROBE USER MANUAL	16	Y
TEKTRONIX	P6701A	CONVERTERS USER MANUAL	74	Y
TEKTRONIX	P6701B	CONVERTERS USER MANUAL	132	Y
TEKTRONIX	P6701B	CONVERTERS SERVICE MANUAL	38	Y
TEKTRONIX	P6810	PROBE INSTRUCTION MANUAL	98	Y
TEKTRONIX	P7240	PROBE INSTRUCTION MANUAL	66	Y
TEKTRONIX	P7240	PROBE USER MANUAL	46	Y
TEKTRONIX	P7260	PROBE SERVICE MANUAL	26	Y
TEKTRONIX	P7330	PROBE INSTRUCTION MANUAL	76	Y
TEKTRONIX	P7330	PROBE USER MANUAL	48	Y
TEKTRONIX	PG508	50MHZ PULSE GENERATOR INSTRUCTION MANUAL		
TEKTRONIX	RFM151	SIGNALSCOUT CABLE TV RF ANALYZER INSTRUCTION MAN.		
TEKTRONIX	SD14	SAMPLING HEAD USER MANUAL	46	Y
TEKTRONIX	SD14	SAMPLING HEAD SERVICE MANUAL	74	Y
TEKTRONIX	SD-14 OPT 01	SAMPLING HEAD INSTRUCTIONS	8	Y
TEKTRONIX	SD-20	SAMPLING HEAD USER MANUAL	52	Y
TEKTRONIX	SD-22,26	SAMPLING HEAD USER MANUAL	44	Y
TEKTRONIX	SD-22,26	SAMPLING HEAD SERVICE MANUAL	86	Y
TEKTRONIX	SD-24	SAMPLING HEAD USER MANUAL	50	Y
TEKTRONIX	SD-24	SAMPLING HEAD SERVICE MANUAL	86	Y
TEKTRONIX	SD-30	SAMPLING HEAD USER MANUAL	38	Y
TEKTRONIX	SD-32	SAMPLING HEAD USER MANUAL	38	Y
TEKTRONIX	SD-32	SAMPLING HEAD SERVICE MANUAL	82	Y
TEKTRONIX	SD-51	TRIGGER HEAD USER MANUAL	34	Y
TEKTRONIX	SG503	SINE WAVE GENERATOR INSTRUCTION MANUAL	53	Y
TEKTRONIX	TDS410A	SCOPE PROGRAMMING MANUAL	386	Y
TEKTRONIX	TDS500B	SCOPE USER MANUAL	302	Y
TEKTRONIX	TDS684A	SCOPE USER MANUAL	292	Y
TEKTRONIX	TDS684A	SCOPE SERVICE MANUAL	290	Y
TEKTRONIX	TDS684A	SCOPE REFERENCE MANUAL	6	Y
TEKTRONIX	TLA700	PROBE ACCESSORY USER MANUAL	2	Y
TEKTRONIX	TM501	POWER MODULE INSTRUCTION MANUAL	32	Y
TEKTRONIX	TM503	POWER MODULE	33	Y
TEKTRONIX	TM515	POWER MODULE INSTRUCTION MANUAL	89	Y
TEKTRONIX	TR501	TRACKING GENERATOR INSTRUCTION MANUAL		
TEKTRONIX	TR503	TRACKING GENERATOR INSTRUCTION MANUAL	71	Y
TEKTRONIX	TSG95	PAL/NTSC SIGNAL GENERATOR SERVICE MANUAL	140	Y
TEKTRONIX	TSG100	NTSC TELEVISION GENERATOR INSTRUCTION MANUAL	71	Y
TEKTRONIX	TSG1001	PROGRAMMABLE TV GENERATOR USER MANUAL	62	Y
TELEQUIPMENT	D31,D31R	DOUBLE BEAM OSCILLOSCOPE OPERATING & MAINTENANCE		
TELEQUIPMENT	D61A	OSCILLOSCOPE INSTRUCTION MANUAL	46	Y
TELEREADER	CWR-685E	CW, BAUDOT & ASCII READER OPERATING MANUAL	51	Y
TELEREADER	CWR-685E	CW, BAUDOT & ASCII READER SERVICE MANUAL	89	Y
TELEREADER	CWR-880	CW, BAUDOT & ASCII READER OPERATING MANUAL	23	Y
TELLUROMETER	MRA 5	MICROWAVE DISTANCE MEASURE USER HANDBOOK	71	Y
TELLUROMETER	MRA3 MK II	MICROWAVE DISTANCE MEASURE INSTRUCTION MANUAL	132	Y
TELONIC	1019	SWEEP/SIGNAL GENERATOR OPERATION & SERVICE	77	Y
TELONIC	HD-3	SWEEP GENERATOR OPERATING & SERVICE MANUAL	44	Y
TELONIC	L-6	PLUG-IN OSCILLATOR INSTRUCTION MANUAL	22	Y
TELONIC	SM2000	SWEEP/SIGNAL GENERATOR INSTRUCTION MANUAL	43	Y
TEN-TEC	260	POWER SUPPLY OWNER'S MANUAL		
TEN-TEC	CENTURY 22	OWNERS MANUAL		
TEN-TEC	CORSAIR II	HF TX/RX OWNER'S MANUAL		
TEN-TEC	OMNI-VI	SCHEMATIC		
TEN-TEC	SCOUT 555	OWNERS MANUAL		
TEXSCAN	AL-60B	OPERATING & INSTRUCTION MANUAL		
TEXSCAN	CS-76	SWEEP GENERATOR OPERATING & INSTRUCTION MANUAL		
TEXSCAN	DU-120	OSCILLOSCOPE INSTRUCTION MANUAL	52	Y
TEXSCAN	FDM1-FDM2	FREQ. DIVERSITY MONITOR OPERATING & MAINTENANCE	38	Y
TEXSCAN	TC250/500	SWEEP GENERATOR OPERATING & INSTRUCTION	29	Y
TEXSCAN	VS-20	SWEEP GENERATOR OPERATING & INSTRUCTION	50	Y
THANDAR	DM350	DIGITAL MULTIMETER SERVICE MANUAL	29	Y
THANDAR	PFM200	FREQUENCY METER INSTRUCTION MANUAL	2	Y
THANDAR	PFM200	FREQUENCY METER SERVICE MANUAL	13	Y
THANDAR	SC110A	OSCILLOSCOPE SERVICE MANUAL	30	Y

THANDAR	TF200	FREQUENCY METER SERVICE MANUAL	21	Y
THANDAR	TG100	FUNCTION GENERATOR SERVICE MANUAL	15	Y
THANDAR	TG105	PULSE GENERATOR SERVICE MANUAL	15	Y
THANDAR	TM351	DIGITAL MULTIMETER SERVICE MANUAL	22	Y
THANDAR	TM352	DIGITAL MULTIMETER SERVICE MANUAL	32	Y
THANDAR	TM353	DIGITAL MULTIMETER SERVICE MANUAL	20	Y
THANDAR	TM354	DIGITAL MULTIMETER SERVICE MANUAL	20	Y
THANDAR	TP600	PRESCALER INSTRUCTION MANUAL	8	Y
THANDAR	TSA250	SPECTRUM ANALYSER ADAPTOR INSTRUCTION MANUAL	26	Y
THE WAR OFFICE	METER, SURVEY	RADIAC NO. 2 USER HANDBOOK	25	Y
THORCOM	RLC100	TNC	14	Y
THORCOM	RLC200	TNC	19	Y
THORCOM	RLC280	TNC USER GUIDE & REFERENCE	98	Y
TIME	2003	DC VOLTAGE CALIBRATOR	32	Y
TOKYO HY-POWER	HC-400L	ANTENNA COUPLER OPERATING INSTRUCTIONS	10	Y
TOKYO HY-POWER	HL-2K	LINEAR AMPLIFIER	23	Y
TOKYO HY-POWER	HL-35V	144MHZ POWER AMPLIFIER INSTRUCTION MANUAL	6	Y
TOKYO HY-POWER	HL-50B	HF/50MHZ LINEAR AMPLIFIER INSTRUCTION MANUAL	10	Y
TOKYO HY-POWER	HL-60U	430MHZ LINEAR AMPLIFIER INSTRUCTION MANUAL	8	Y
TOKYO HY-POWER	HT-106	50MHZ TRANSCEIVER INSTRUCTION MANUAL	17	Y
TOKYO HY-POWER	HX-650	HF - 50MHZ TRANSVERTER INSTRUCTION MANUAL	17	Y
TONO	550	COMMUNICATIONS TERMINAL INSTRUCTION MANUAL	34	Y
TOSHIBA	TMC-1AX/2AX	WATCHGUARD MINICAMERA SERVICE DATA		
TRAK SYSTEMS	8810C-40	GPS STATION CLOCK TECHNICAL MANUAL	70	Y
TRADIPER	TE-15	GRID DIP METER	7	Y
TWC	RAT1000	AUTO ATU SERVICE MANUAL		
VARIAN	R-20	RUBIDIUM FREQUENCY STANDARD TECHNICAL MANUAL		
VCI	HFT-1500	DIGITAL ANTENNA TUNER OWNERS MANUAL	15	Y
W&G	DF-64	ERROR RATIO MEASURING SET OPERATING MANUAL		
W&G	DF-64	ERROR RATIO MEASURING SET APPENDIX		
W&G	PF-2	BIT ERROR RATIO MEASURING SET OPERATING MANUAL		
W&G	PF-2	BIT ERROR RATIO MEASURING SET SERVICE MANUAL		
W&G	PS-30	LEVEL GENERATOR OPERATING MANUAL	32	Y
W&G	PMG-3	AF LEVEL MEASURING SET OPERATING MANUAL	35	Y
W&G	RFZ-12	RETURN LOSS MEASURING ATTCHMENT		
W&G	SDZ-12	SIGNAL BALANCE RATIO MEASURING ATTACHMENT		
W&G	SPM-31	SELECTIVE LEVEL METER APPENDIX	84	Y
WALKER & LEACH	GPO 35A	RADIO RECEIVER OPERATING & MAINTENANCE		
WATKINS JOHNSON	W8888	RECEIVER TECHNICAL MANUAL	416	Y
WAVETEK	171	SYNTHESIZER/FUNCTION GENERATOR OP & MAINT	41	Y
WAVETEK	172B	PROGRAMMABLE SIGNAL SOURCE		
WAVETEK	1038-N10	NETWORK ANALYZER OPERATING & MAINTENANCE	220	Y
WAVETEK	1076/1077	RF SWEEP COMPARATOR	61	Y
WAVETEK	1080/1081	SWEEP GENERATOR INSTRUCTION MANUAL	119	Y
WAVETEK	1880	SYSTEM ANALYZER OPERATING HANDBOOK	20	Y
WAVETEK	1910	DISPLAY OSCILLOSCOPE INSTRUCTION MANUAL		
WAVETEK	3001/3002	RF SIGNAL GENERATOR INSTRUCTION MANUAL	171	Y
WAVETEK	PMI 1038-NS20	NETWORK ANALYSER OPERATIONAL HANDBOOK	35	Y
WAYNE KERR	3245	PRECISION INDUCTANCE ANALYZER OPERATING		
WAYNE KERR	B221	UNIVERSAL BRIDGE INSTRUCTION MANUAL		
WAYNE KERR	B424	COMPONENT BRIDGE OPERATING & MAINTENANCE	57	Y
WAYNE KERR	B500	LOG LCR BRIDGE OPERATING INSTRUCTIONS	9	Y
WAYNE KERR	B522	COMPONENT BRIDGE		
WAYNE KERR	B601	COMPONENT BRIDGE		Y
WAYNE KERR	B602	COMPONENT BRIDGE	24	Y
WAYNE KERR	B605	AUTO COMPONENT BRIDGE OPERATING & SERVICE		
WAYNE KERR	B642	AUTO COMPONENT BRIDGE OPERATING & MAINTENANCE	95	Y
WAYNE KERR	PDD3502A	BENCH POWER SUPPLY INSTRUCTION / SERVICE	46	y
WEIR	4000	LAB PSU OPERATING INSTRUCTIONS	11	Y
WEIR	403,413,423	BENCH VARIABLE POWER SUPPLIES	12	Y
WEIR	413,423	BENCH VARIABLE POWER SUPPLIES	12	Y
WEIR	731,732,761,762	POWER SUPPLY TECHNICAL INFO.	11	Y
WEIR	761.1/762.1	POWER SUPPLY TECHNICAL INFO.	12	Y
WESTERN	PM2000A	SWR/POWER METER		
WILTRON	560A	NETWORK ANALYSER OPERATING & SERVICE	493	Y
WILTRON	610B	SWEPT FREQUENCY GENERATOR INSTRUCTION		
WILTRON	610D	SWEEP GENERATOR INSTRUCTION MANUAL	113	Y
WILTRON	6100D SERIES	RF PLUG-IN OPERATION & MAINTENANCE MANUAL		
WILTRON	6211D,15D,19D,23D,29D	RF PLUG-IN OPERATION & MAINTENANCE MANUAL	85	Y
WILTRON	6213D	RF PLUG-IN OPERATION & MAINTENANCE MANUAL	56	Y
WILTRON	6221D,25D,37D,47D	RF PLUG-IN OPERATION & MAINTENANCE MANUAL	58	Y
WILTRON	6407/6409	RF ANALYZER OPERATION & MAINTENANCE MANUAL	269	Y
WILTRON	66xxA series	PROGRAMMABLE SWEEP GENERATOR OPERATING	74	Y
WILTRON	66xxB series	PROGRAMMABLE SWEEP GEN OPERATION & MAINTENANCE	538	Y
WILTRON	S110/S111/S330/S331	SITEMASTER USERS GUIDE	81	Y
WIRELESS SET	B70	4580/4860 MHZ FM LINK USER MANUAL	44	Y
ZYCOMM	FM-2512	VHF/FM MOBILE RADIO SERVICE MANUAL	29	Y
ZYCOMM	FM9000H/M	VHF HANDPORTABLE SERVICE MANUAL	11	Y